


HPLA Linear actuator - User Guide

**PLEASE NOTE THIS IS FOR MAINTENANCE REFERENCE ONLY.
PART#'S NOMENCLATURE IS HAUSER GERMANY OFFERING.
PLEASE REFER TO WWW.PARKERMOTION.COM FOR USA
PART# NOMENCLATURE**

Mounting, start-up, maintenance, repair

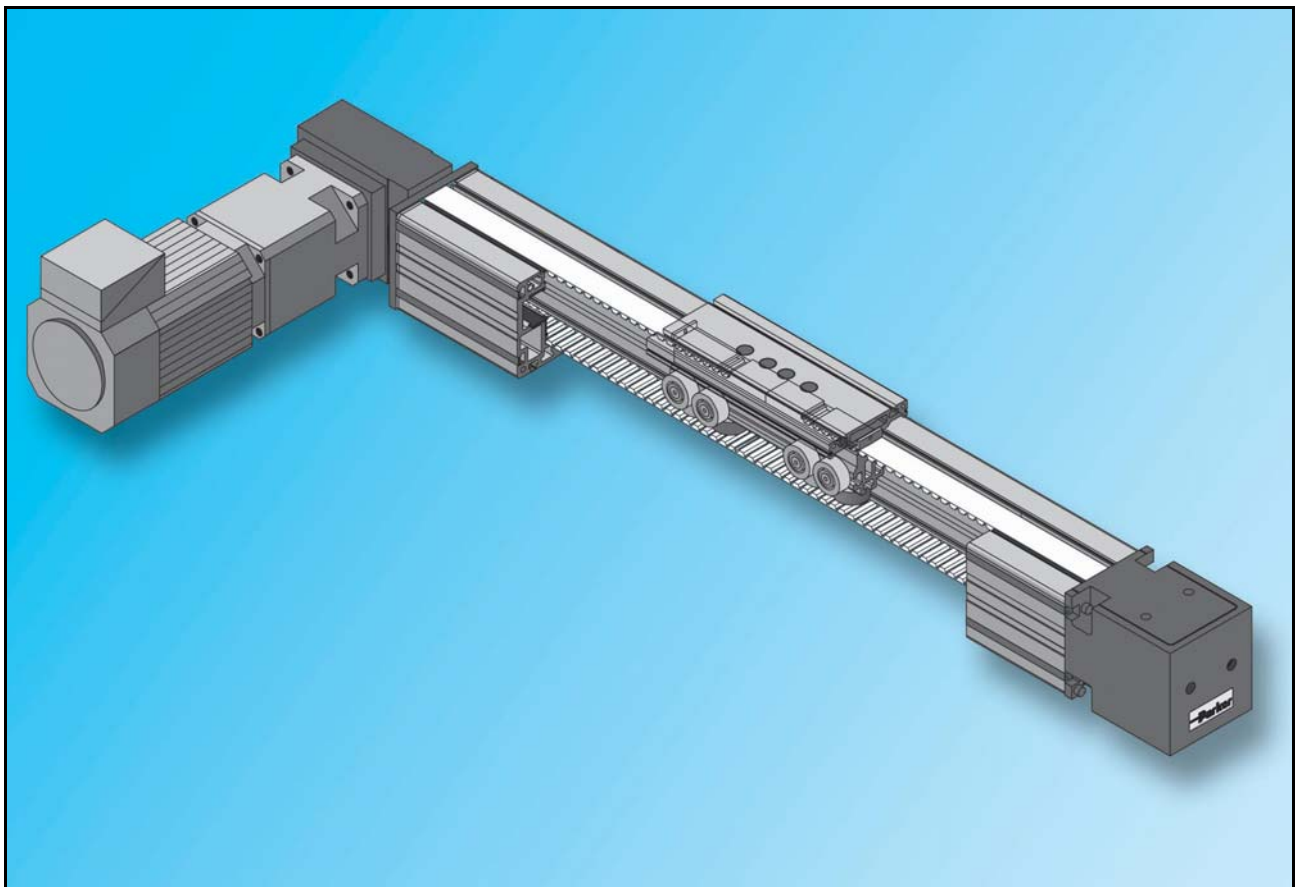

PLEASE NOTE THIS IS FOR MAINTENANCE REFERENCE ONLY.
PART#'S NOMENCLATURE IS HAUSER GERMANY OFFERING.
PLEASE REFER TO WWW.PARKERMOTION.COM FOR USA PART# NOMENCLATURE

HAUSER
We automate motion



Parker Hannifin GmbH
EMD HAUSER
Postfach: 77607-1720
Robert-Bosch-Str. 22
D-77656 Offenburg
Tel.: +49 (0)781 509-0
Fax: +49 (0)781 509-176
<http://www.parker-emd.com>

Content

PLEASE NOTE: THIS IS HAUSER GERMANY MANUAL.
FOR USA NOMENCLATURE PLEASE GOTO PARKERMOTION.COM

1 Safety	5	3.4.3 Version with one initiator	24
1.1 Correct usage	5	3.4.3.1 Wiring the initiator	24
1.2 Identification of residual dangers and danger areas	5	3.4.3.2 Setting up the end limits	24
1.3 General dangers resulting from non-observance of the safety notices	5	4 Maintenance	25
1.4 Safety-conscious working	6	4.1 Maintenance schedule	25
1.4.1 Following the advice	6	4.2 Replacement intervals for steel strip cover wearing parts	25
1.4.2 Operating personnel	6	4.3 Causes of abnormal timing belt wear	26
1.5 Safety notices for the user company	6	5 Assembly/repair	27
1.6 Safety notices for the operating personnel	6	5.1 Safety notices	27
1.7 Advice on particular dangers	7	5.2 Changing, tensioning and aligning the timing belt	27
1.8 Unauthorised conversions and modifications	7	5.2.1 General information on the timing belt	27
1.9 Transport	7	5.2.2 Changing the timing belt	27
2 Technical data	8	5.2.3 Tensioning the timing belt	29
2.1 Product construction and description	8	5.2.3.1 Fundamentals	29
2.2 Technical data	9	5.2.3.2 Checking and adjusting the belt tension	31
2.3 Load bearing capacity of carriage and timing belt	10	5.2.3.3 Measuring the timing belt tension	31
2.3.1 Load bearing capacity HPLA80	10	5.3 Checking the belt run and aligning the timing belt	31
2.3.2 Load bearing capacity HPLA120	11	5.4 Adjusting the carriage play	32
2.3.3 Load bearing capacity HPLA180	12	5.4.1 Flow chart for changing and adjusting the wheels	32
2.4 Additional mass moment of inertia due to effective load and weight of the timing belt	13	5.4.2 Checking the carriage play	33
2.5 Dimensions	14	5.4.3 Removing the carriage	33
2.5.1 Dimensions of HPLA80 with timing belt	14	5.4.4 Changing individual wheels	34
2.5.2 Dimensions of HPLA120 with timing belt	14	5.4.4.1 General	34
2.5.3 Dimensions of HPLA180 with timing belt	14	5.4.4.2 Changing and adjusting rigid (concentric) wheels	34
2.5.4 Dimensions of HPLA180 with rack-and-pinion drive	15	5.4.4.3 Changing and adjusting the eccentric wheels	35
2.5.5 Dimensions of idler unit	16	5.4.5 Installing the carriage	35
2.6 Dimensions carriage with bar	16	5.4.6 Adjusting the reference point	36
2.6.1 LBB080 / LBB120 standard carriage with bar (T)	17	5.5 Re-lubricating the steel guide	36
2.6.2 LBB080 / LBB120 extended carriage with bar (F)	17	5.6 Changing or attaching the motor	36
2.6.3 LBB180 standard carriage with bar (T)	18	5.6.1 Changing the motor in combination with a Stöber planetary gearbox	36
2.6.4 LBB180 extended carriage with bar (F)	18	5.6.2 Further gearbox types	37
2.7 Definition of stroke, usable stroke and safety travel	18	5.6.2.1 Shaft-hub connection via a shaft key	37
2.7.1 Establishing required safety travel	19	5.6.2.2 Claw coupling	38
3 Start-up	20	5.7 Changing the gearbox (pulley mounted on gearbox shaft)	39
3.1 General	20	5.8 Replacing the pulley	40
3.2 Support structure preparation	20	5.8.1 Replacing the pulley on the drive station	40
3.3 Installation	21	5.8.1.1 Pulley with bearings on a hollow shaft (1a, 1b and 1c)	41
3.3.1 Installing a single actuator	21	5.8.1.2 Pulley with bearings directly on shaft (2)	41
3.3.2 Installing a dual actuator	21	5.8.1.3 Pulley fitted directly on the gearbox shaft	41
3.4 Initiators/sensors	22	5.8.2 Replacing the pulley on the tensioning station	42
3.4.1 General	22	5.9 Dual actuators	42
3.4.2 Version with three initiators	22	5.9.1 General	42
3.4.2.1 Wiring initiators/sensors	22	5.9.2 Aligning the carriages with one another	42
3.4.2.2 Setting up the end limits	23	5.9.3 Actuator spacing	43
		5.10 Spliced or jointed actuators	44
		5.10.1 General	44
		5.10.2 Mounting splicing plates	44
		5.11 Steel strip cover	45
		5.11.1 Mounting, dismantling and replacing worn parts	45

5.11.1.1	Dismantling the steel strip cover	45
5.11.1.2	Mounting the steel strip cover	45
5.11.1.3	Replacing the steel strip.....	46
5.11.1.4	Replacing the drag bar (felt wiper).....	46
5.11.1.5	Replacing the baffle or running bar	46
5.11.2	Retrofitting the steel strip cover	47
6	Wearing parts and replacement parts	49
6.1	Wearing parts	49
6.1.1	Wearing parts HPLA80	49
6.1.2	Wearing parts HPLA120	49
6.1.3	Wearing parts HPLA180	50
6.2	Replacement parts	51
6.2.1	Replacement parts HPLA80	51
6.2.2	Replacement parts HPLA120	51
6.2.3	Replacement parts HPLA180	52
7	Order code.....	53
8	Index	54

Content

PLEASE NOTE: THIS IS HAUSER GERMANY MANUAL.
FOR USA NOMENCLATURE PLEASE GOTO PARKERMOTION.COM

1 Safety

1.1 Correct usage

The HPLA linear actuator can be used, amongst other things, for:

positioning, transporting, feeding, removing, palletising, loading, unloading, handling and manipulating workpieces or tools.

As it can be used in widely differing areas, responsibility for use in a specific application rests with the user.

The user must ensure that in mounting workpieces or tools on the carriage of the linear actuator there is no danger to personnel and/or possible damage to property. This also applies, for example, in the case of the timing belt breaking.

The linear actuator may only be used in those areas which are inaccessible to personnel during operation.

If the linear actuator is used in areas which are accessible to personnel, then it must be installed in such a way that they are not endangered during operation.

1.2 Identification of residual dangers and danger areas

If there are residual dangers for personnel or property, in spite of the linear actuator being used under safely constructed conditions, then the user must indicate these residual dangers by the use of signs and written rules of conduct.

Safety notices used

	Danger	means that a dangerous situation can lead to death or serious physical injury if not otherwise prevented by corresponding safety measures.
	Warning	means that a possibly dangerous situation can lead to possible serious injury if not otherwise prevented by corresponding safety measures.
	Caution	means that a possible dangerous situation can lead to minor physical injury or damage to property if not otherwise prevented by corresponding safety measures.
	Note	is an important piece of information on the product, its handling or the respective section of the handbook to which you should refer in particular.

1.3 General dangers resulting from non-observance of the safety notices

This machine component has been constructed using the latest technology and is safe in operation. However, dangers can arise through the machine if operators who are untrained or have not at least been instructed in the machine operation, use it incorrectly or put it to improper use.

As a consequence, there may be a risk of:

1. Danger to the life and limb of the user or a third party
2. Damage to the machine and the user's other property

On installing the linear actuator in a machine, the safety regulations given in this introduction must be sensibly integrated into the operating instructions for the machine.

1.4 Safety-conscious working

1.4.1 Following the advice

In all work which involves the installation, the start-up, the set-up, the operation, the modification of conditions of use and operation methods, maintenance, inspections and repairs, the advice given in the start-up instructions must be followed.

1.4.2 Operating personnel

The following work may only be carried out by correspondingly trained and authorised personnel:

1. Mounting and calibration work on the linear actuator
2. Attachment of safety limit switches (initiators)
3. Attachment and connection of the drive and checking the direction of rotation

1.5 Safety notices for the user company

Supervisors must familiarise themselves with both the whole chapter on "Safety" and the necessary handling of the linear actuator.

Supervisors must ensure that the chapter on Safety and the description of the corresponding handling have been read, understood and are being maintained by the personnel responsible for mounting and operation.

The linear actuator must only be operated when in perfect condition.

1.6 Safety notices for the operating personnel

Do not use any method of working which adversely affects the operating safety of the linear actuator.

The operating personnel and supervisory staff are obliged to check the linear actuator and the machine at least once per shift for any signs of external visible damage or faults, any changes which have occurred (including the operating behaviour) which adversely affect the safety, and to report these immediately.

Components and accessories have been specially designed for the product. In acquiring replacement parts and replacing worn parts, only our genuine replacement parts must be used. We would like to make you particularly aware that genuine parts and accessories not supplied by us have also not been checked and released by us. The installation and/or use of such products can therefore, under certain circumstances, have an adverse effect on the constructional characteristics of the machine and thus affect active and/or passive operating safety.

We accept no liability as manufacturers for damage arising through the use of non-genuine parts and accessories.

On no account may any safety fixtures be removed or overridden.

Protective fixtures may not be made ineffective or bypassed.

The relevant requirements and national accident-prevention regulations are always to be complied with when installing and operating our mechanical linear actuators.

1.7 Advice on particular dangers

The HPLA must be fastened or supported at the prescribed minimum distances in accordance with the details in these instructions.

Please ensure that no danger can arise through movement of the HPLA.

If the HPLA moves in danger areas, then these areas can be defined using final limit switches.

1.8 Unauthorised conversions and modifications

The linear actuator may not be altered either in construction or in any way which affects safety without our permission. Any unauthorised alteration of this kind excludes any liability on our part.

1.9 Transport

 Danger	Do not walk under the suspended load - there is a risk of injury! Ensure that parts subject to movement do not move off-centre or out of position.
 Note	Take care when transporting long actuators. Deflection can badly affect the guidance. Equally, the profile can change and adversely affect the performance of the carriage.

Only use transport equipment with adequate lifting capacity. When using ropes, ensure that these are not twisted or knotted. If several ropes are used, all should be under equal tension.

When transporting the HPLA using a fork lift truck, the position of equilibrium must be counter-balanced and the load secured if necessary.

An estimate of the weight of the HPLA can be made as follows:

Measure the length L of the profile and read off the reference value for the weight from Diagramm 1.


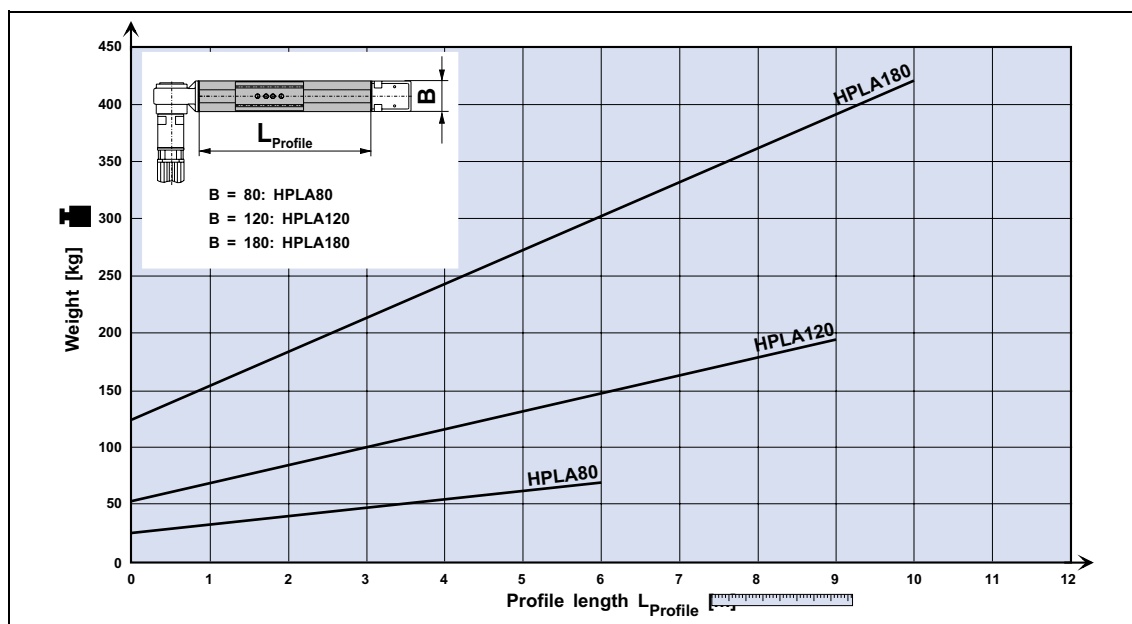


Diagramm 1: Reference values for the HPLA transportation weight (single actuator with motor and gearbox)

2 Technical data

2.1 Product construction and description

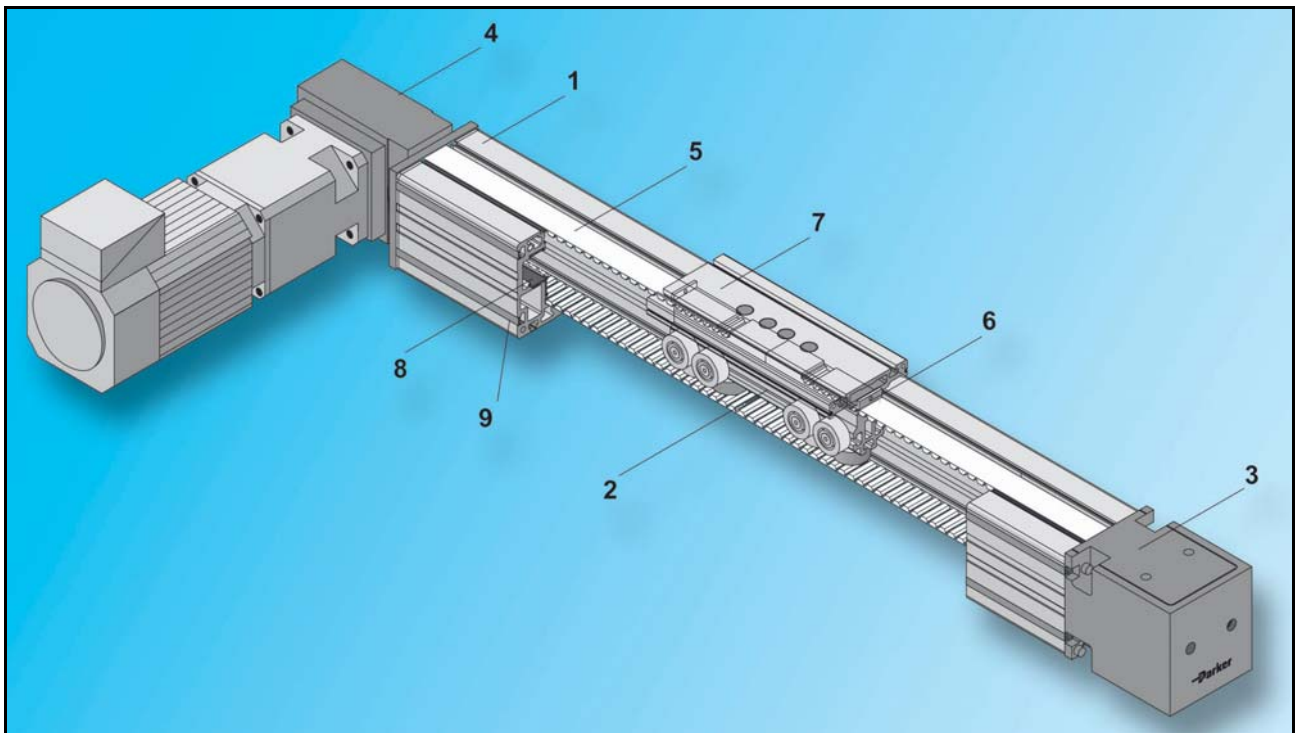

The profile (1)

By using finite element analysis we have optimised the aluminium extrusion bar profile to maximise rigidity (torsion and deflection) and minimise weight.

The modular concept permits the same profile to be used for all HPLA variants:

- drive version with timing belt drive
- version with rack-and-pinion
- guide with plastic rollers on aluminium
- guide with steel rollers on a steel strip which is integrated into the profile.

6 steel strips (8) are fitted into the profile of the version with steel rollers. The profile can be supplied in cross-sections of:

- 80 x 80mm (HPLA80)
- 120 x 120mm (HPLA120)
- 180 x 180mm (HPLA180).

Two assembly grooves are located on the two sides and on the bottom. These can be used in accordance with DIN-508 for T-nuts to fasten additional mechanical components and to connect several linear actuators. When combined with the covering profile (9), this forms cable ducts, e.g. for the initiator cables.

The carriage (2)

The aluminium carriage profile has also been optimised using FEA methods. The plastic or steel rollers (mounted on roller bearings and lubricated for life) are set via the eccentric to eliminate play on all sides. The carriage can be supplied in two sizes as the standard carriage with 12 rollers or extended carriage with 24 rollers.

The tensioning station (3)

An easily accessible tensioning station which is simple to maintain and assemble. It is used to set the necessary tension of the timing belt and its alignment (parallel to the pulleys).

The drive station (4)

The HPLA can be delivered with numerous drive options. Everything is possible – from the pulley mounted on gearbox shaft through a fully supported hollow shaft up to a drive shaft on left, on right or on both sides.

The timing belt (5)

The timing belt is slip-free and is reinforced by integral steel wires, thereby ensuring maximum travel speeds and repeatability.

Clamping of timing belt (6)

The timing belt clamping angle and the large area of the clamping guarantees a secure connection between the timing belt and the carriage.

The clamping system allows the timing belt to be replaced without the load attachment plate having to be dismantled. This means that attachments do not normally need to be removed.

The load attachment plate (7)

The longitudinal grooves integrated on the top of the plate offer many options for the assembly of attachments. When used in conjunction with our clamping profiles, this allows for simple incorporation in a multiple axis system.

Simple and adjustable attachment of operating cams or switch lugs is provided by means of lateral and longitudinal grooves.

Height and bolt points are unaffected if the steel strip cover is attached at a later date.

Technical data

2.2 Technical data

HPLA Size	Unit	HPLA080		HPLA120		HPLA180		
		Timing belt drive Plastic roller guidance	Steel roller guidance	Timing belt drive Plastic roller guidance	Steel roller guidance	Timing belt drive Plastic roller guidance	Steel roller guidance	Rack-and-pinion Plastic roller guidance

Weight and mass moments of inertia

Weight of base unit with zero stroke								
HPLA with standard carriage (S) as above with steel strip cover	kg	6,0	6,6	18,6	19,8	49,8	53,4	71,8
HPLA with extended carriage (E) as above with steel strip cover	kg	7,8	8,6	23,5	25,2	67,4	72,6	88,6
Carriage + load att. plate (S) as above with steel strip cover	kg	1,5	1,6	5,5	5,7	11,4	11,8	9,9
Carriage + load att. plate (E) as above with steel strip cover	kg	2,4	2,6	8,5	8,9	20,3	21,0	17,2
Weight of drive module	kg	--	--	--	--	--	--	20,0
Weight p. metre of add. length as above with steel strip cover	kg/m	6,0	7,2	13,5	15,4	29,2	33,4	31,4
		6,1	7,3	13,7	15,5	29,4	33,6	31,5
Mass moment of inertia related to the drive shaft with zero stroke ¹⁾								
HPLA with standard carriage (S) as above with steel strip cover	kgcm ²	16,0	16,6	136	140	668	695	646
HPLA with extended carriage (E) as above with steel strip cover	kgcm ²	23,6	24,7	191	198	1074	1107	793
		25,4	26,5	197	204	1121	1154	845

Travel paths and speeds

Maximum travel speed	m/s	5,0						
Maximum acceleration	m/s ²	10,0						
Maximum travel path, standard-carr. (S/T) ²⁾ with one profile bar as above with steel strip cover	mm	5610	5590	9560	9530	9440	9400	8880
		5540	5520	9470	9440	9240	9200	8680
Maximum travel path, extended carr. (E/F) ²⁾ with one profile bar as above with steel strip cover	mm	5460	5440	9360	9330	9140	9100	8580
		5390	5370	9270	9240	8940	8900	8380

Geometrical data of guide profile

Cross-section	mmxmm	80 x 80	120 x 120	180 x 180
Moment of inertia I _x	cm ⁴	139	724	3610
Moment of inertia I _y	cm ⁴	165	830	4077
E-module (aluminium)	N/mm ²	0,72 * 10 ⁵		

Forces, torques and efficiency

Nominal drive torque	Nm	26,5	74,2	244	58
Maximum drive torque	Nm	47,4	131,4	368	58
Nominal thrust force with fully supported hollow-shaft bearing	N	925	1696	3733	--
Thrust force (effective load)	N	see page 10	see page 11	see page 12	1300
Repeatability	mm	± 0,2	± 0,2	± 0,2	± 0,05
Efficiency	%	95	95	95	80

Data of pulley and timing belt

Travel distance per revolution	mm/U	180	270	420	280
Number of teeth on pulley		18	27	21	28
Timing belt width / pitch	mm	25 / 10	32 / 10	56 / 20	42 / 10
Weight of timing belt	kg/m	0,166	0,213	0,550	0,251
Response radius of the pulley of the drive (R _A)	mm	28,7	43,0	66,8	44,56

1) Additional mass moment of inertia due to effective load and weight of timing belt: (see chapter 2.4).

2) Longitudinal flange connection can be used for longer travel paths. Some restrictions have to be considered for: maximum load permitted, drive torque, speed, acceleration and Repeatability (see chapter 5.10). For actuators with rack-and-pinion drive the travel distance is unlimited (as far as the linear actuator is concerned) – depending only on power input from the drive..



Technical data issued July/2003, safety factor taken into consideration S=1. Data applies for a temperature range of between -10°C and +40°C. The technical data applies under standard conditions and only for the individually specified operating mode and nature of load. In the case of compound loads, it must be verified in accordance with the laws of physic and technical standards, whether single data have to be

reduced. Please contact us in the case of doubt.

2.3 Load bearing capacity of carriage and timing belt


The thrust force F_x the **timing belt** is capable of transferring depends on its pretension. If nothing other is indicated the HPLA will be delivered with a standard pretension. With this pretension the HPLA is able to transfer the nominal thrust force F_{nom} . If your application needs a higher thrust force the timing belt gets a higher pretension and is able to transfer thrust forces up to F_{max} . If the force you transfer is greater than the pretension of timing belt it can happen that the timing belt jumps on the pulley. The service life (s_{nom} / s_{max}) of the drive chain (without guiding system; with pulley mounted on gearbox shaft: bearing of gearbox), depends on the pretension and the thrust force that occurs.

The forces and torques the **carriage** is capable of transferring is speed-dependent. The curves shown in the graphs apply to a standard carriage (S/T). With the extended carriage (E/F) all the values apart from F_x (load-bearing capacity of timing belt) can be doubled, if the load is applied equally to both halves of the carriage or distributed uniformly along its entire length. The curves show the maximum load-bearing capacity of a carriage in one direction of force or torque. If several loads are applied in different directions, the values given by the curves **must be derated**, i.e. the load or speed should be reduced if necessary. For the precise carriage dimensioning, our software "DimAxes" is available (→ free download: <http://www.parker-emd.de>).

2.3.1 Load bearing capacity HPLA80

Thrust force HPLA80 (F_x)	Transferable thrust force (with dual actuators: each belt drive)		Nominal service life ¹	
	F_{nom} [N]	F_{max} [N]	s_{nom} [km]	s_{max} [km]
Drive options (→ page 53)				
NL/NR / DL/DR / LR/RL (Single-/Dual actuator, hollow shaft bearing)	925	1114	81000	46000
SL/SR / SB (Single-/Dual actuator, full-shaft bearing)	925	1114	81000	46000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P3 (A)	474	602	81000	40000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P3V (A)	925	1114	81000	46000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P4 (B)	557	671	81000	46000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P4V (B)	925	1114	81000	46000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft PE4 (Q)	500	600	81000	46000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft PE5 (R)	675	900	81000	46000



Load bearing capacity HPLA80 (F_y and F_z)

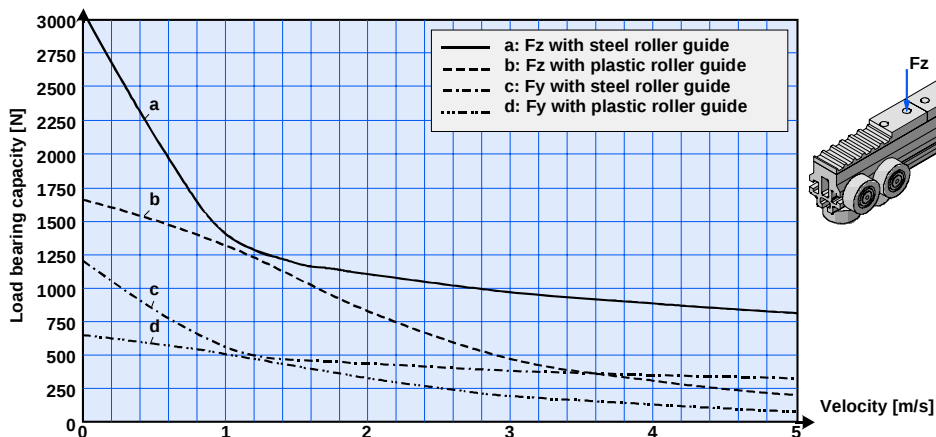

¹ The calculation of nominal service life for roller bearings bases on: at least 90% of all bearings achieve or exceed the nominal service life.

Technical data

Maximum per-
missible torque
HPLA80 (Mx, My
and Mz)

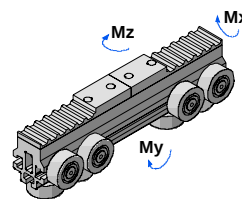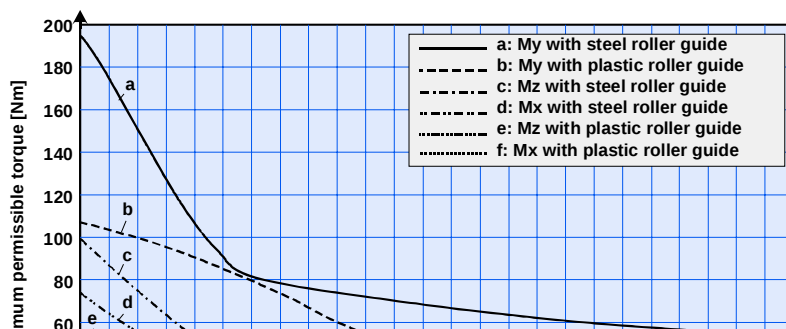

PLEASE NOTE THIS IS FOR MAINTENANCE/REFERENCE PART#'S NOMENCLATURE IS HAUSER GERMANY OFFERING. PLEASE REFER TO WWW.PARKERMOTION.COM FOR USA PART# NOMENCLATURE



2.3.2 Load bearing capacity HPLA120

Thrust force HPLA120 (Fx)

Please note the explanations in chapter "Load bearing capacity of carriage and timing belt", page 10!


Drive options (→ page 53)	Transferable thrust force (with dual actuators: each belt drive)		Nominal service life ²	
	F_nom. [N]	F_max [N]	s_nom. [km]	s_max [km]
NL/NR / DL/DR / LR/RL (Single-/Dual actuator, hollow shaft bearing)	1696	2234	85000	37000
SL/SR / SB (Single-/Dual actuator, full-shaft bearing)	1696	2234	85000	37000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P4 (B)	627	905	85000	28000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P4V (B)	1514	2014	85000	36000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P5 (C)	1059	1529	85000	28000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P5V (C)	1696	2234	85000	37000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft PE5 (R)	675	900	85000	37000

Load bearing capacity HPLA120 (Fy and Fz)

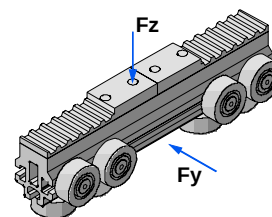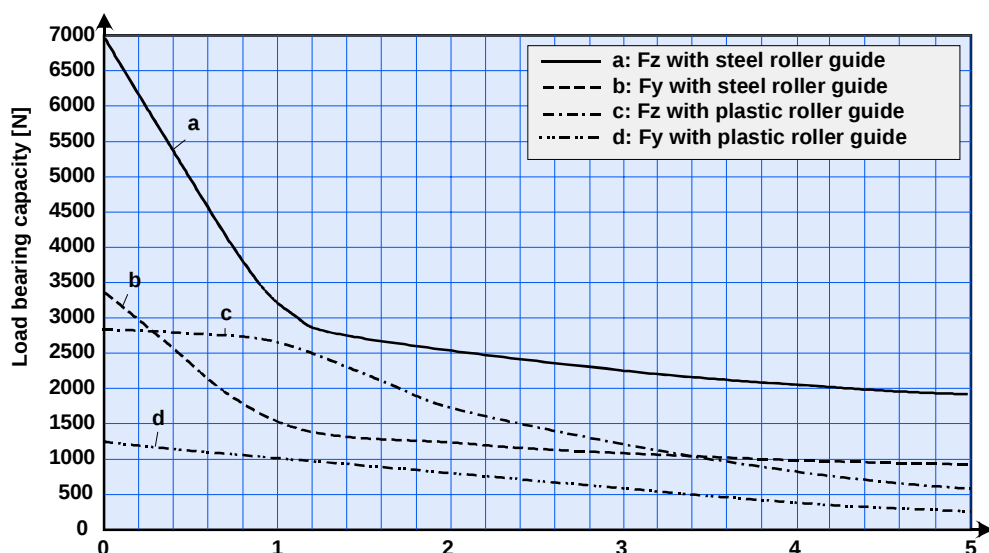

² The calculation of nominal service life for roller bearings bases on: at least 90% of all bearings achieve or exceed the nominal service life.

Maximum permissible torque HPLA120 (Mx, My, Mz)

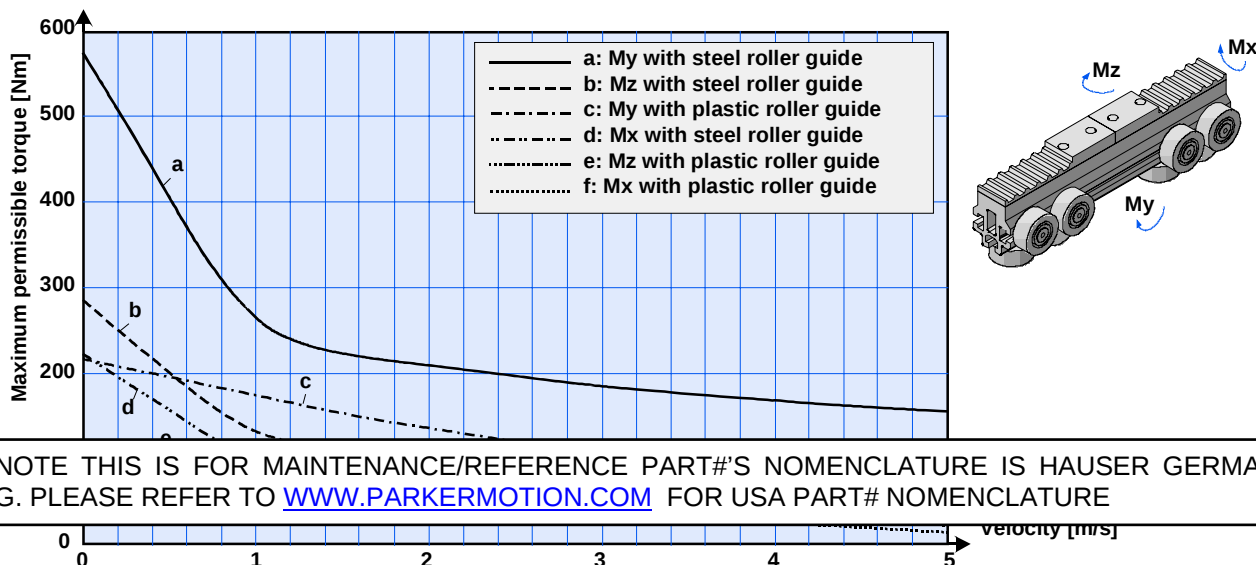


2.3.3 Load bearing capacity HPLA180

Thrust force HPLA180 (Fx)

Please note the explanations in chapter "Load bearing capacity of carriage and timing belt", page 10!


Drive options (→ page 53)	Transferable thrust force (with dual actuators: each belt drive)		Nominal service life ³	
	F_nom. [N]	F_max [N]	s_nom. [km]	s_max [km]
NL/NR / DL/DR / LR/RL (Single-/Dual actuator, hollow shaft bearing)	4169	5457	100000	45000
SL/SR / SB (Single-/Dual actuator, full-shaft bearing)	3770	3770	136000	136000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P5 (C)	1160	1519	100000	45000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P5V (C)	2513	2513	112000	112000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P7 (D)	1654	2164	100000	45000
GL/GR // FL/FR, Single actuator, pulley mounted on gearbox shaft P7V (D)	3561	4398	100000	54000

Load bearing capacity HPLA180 (Fy and Fz)

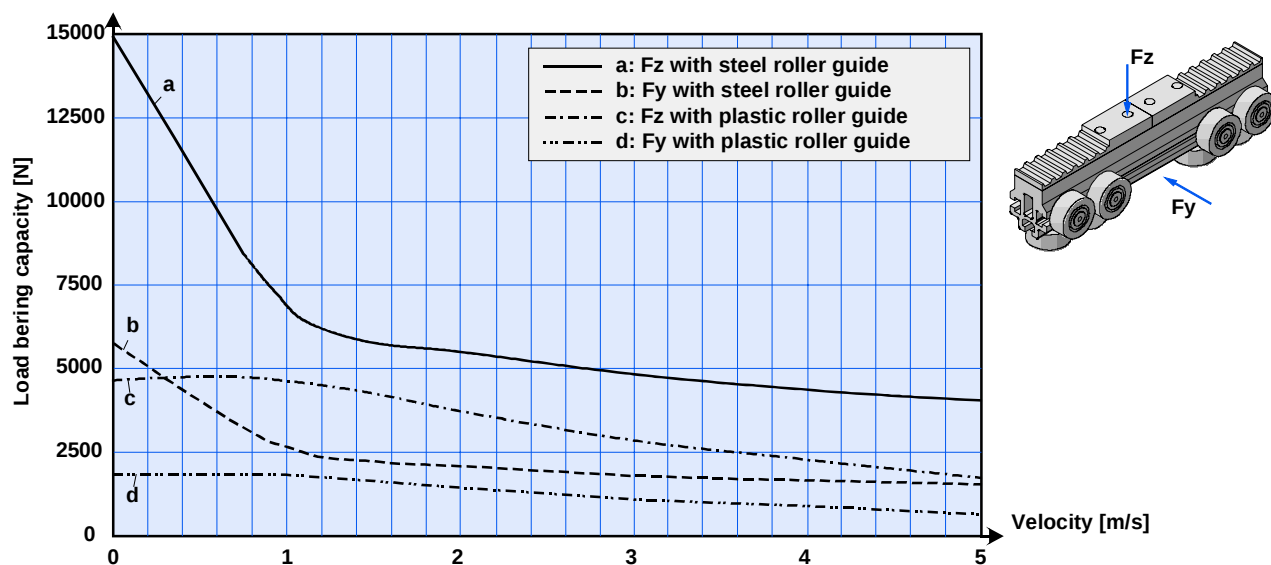

³ The calculation of nominal service life for roller bearings bases on: at least 90% of all bearings achieve or exceed the nominal service life.

Technical data

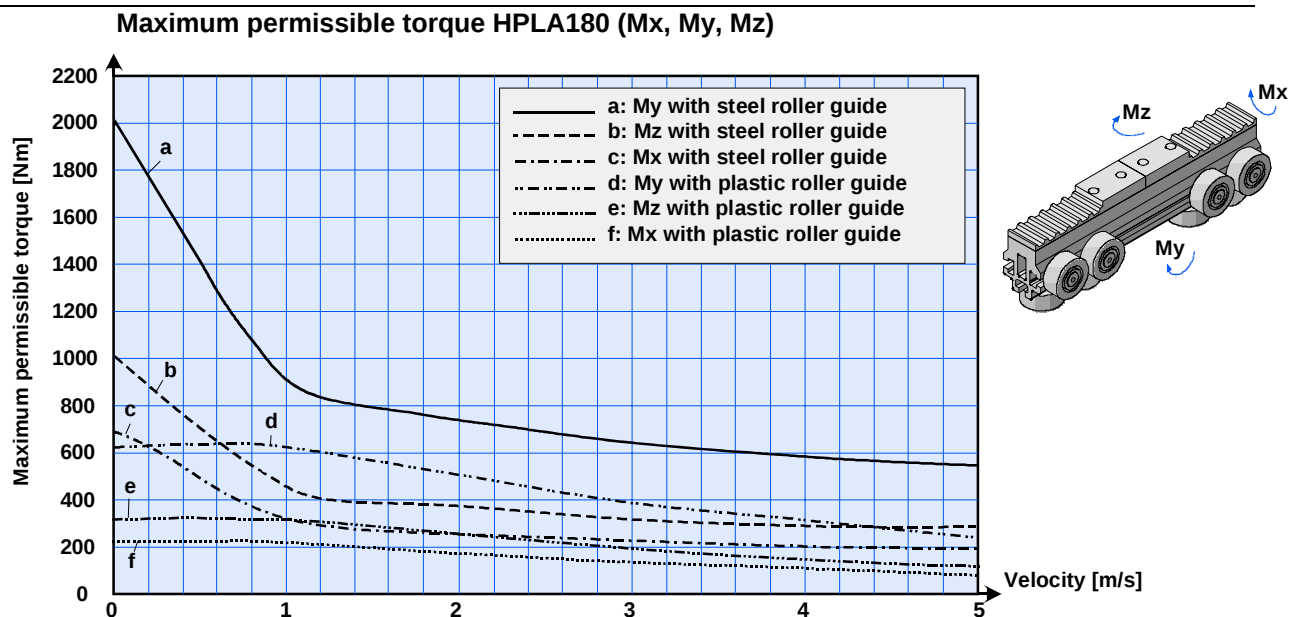

2.4 Additional mass moment of inertia due to effective load and weight of the timing belt

Formula for actuators with timing belt:	Formula for actuators with rack:
$J_Z = J_{NL} + J_R$ $J_{NL} = m_{NL} \times R_A^2$ $J_R = m_R \times R_A^2$ $m_R = L_R \times m_{R1M}$ $L_R \approx 2 \times \text{stroke} + L_{R0H}$	$J_Z = m_{NL} \times R_A^2$ Add weight of motor and gearbox to the effective load!

Key:

J_Z	= Additional mass moment of inertia [kgcm ²]
J_{NL}	= Additional mass moment of inertia due to the effective load [kgcm ²]
J_R	= Additional mass moment of inertia due to the weight of timing belt [kgcm ²]
m_{NL}	= Weight of the effective load moved by the linear actuator [kg]
m_R	= Weight of timing belt [kg]
m_{R1M}	= Weight per metre of timing belt (see technical data, page 9) [kg/m]
L_R	= Length of timing belt [m]
L_{R0H}	= Length of timing belt of an actuator without stroke (see Table 7, page 28)
R_A	= Response radius of pulley (see technical data, page 9) [cm]

2.5 Dimensions

2.5.1 Dimensions of HPLA80 with timing belt

PLEASE REFER TO WWW.PARKERMOTION.COM
FOR UPDATED DIMENSIONAL INFORMATION

2.5.2 Dimensions of HPLA120 with timing belt

PLEASE REFER TO WWW.PARKERMOTION.COM
FOR UPDATED DIMENSIONAL INFORMATION

2.5.3 Dimensions of HPLA180 with timing belt

Technical data

PLEASE REFER TO WWW.PARKERMOTION.COM
FOR UPDATED DIMENSIONAL INFORMATION

2.5.4 Dimensions of HPLA180 with rack-and-pinion drive

PLEASE REFER TO WWW.PARKERMOTION.COM
FOR UPDATED DIMENSIONAL INFORMATION

PLEASE REFER TO WWW.PARKERMOTION.COM
FOR UPDATED DIMENSIONAL INFORMATION


		Cognitive						Emotional					
		Attention	Memory	Reasoning	Problem Solving	Decision Making	Emotional Stability	Empathy	Self-Regulation	Interpersonal Skills	Resilience	Stress Management	
Participant A	Q1	85	78	92	88	75	80	72	85	78	82	75	
	Q2	82	75	90	85	72	78	70	82	75	80	72	
	Q3	88	80	95	90	78	82	75	88	80	85	78	
	Q4	80	72	88	82	70	75	68	78	70	75	68	
	Q5	85	78	92	88	75	80	72	85	78	82	75	
	Q6	82	75	90	85	72	78	70	82	75	80	72	
	Q7	88	80	95	90	78	82	75	88	80	85	78	
	Q8	80	72	88	82	70	75	68	78	70	75	68	
	Q9	85	78	92	88	75	80	72	85	78	82	75	
	Q10	82	75	90	85	72	78	70	82	75	80	72	
Participant B	Q1	78	70	85	80	68	72	65	75	68	70	65	
	Q2	75	68	82	78	65	70	62	72	65	68	62	
	Q3	80	72	88	82	70	75	68	78	70	75	68	
	Q4	72	65	80	75	62	68	60	70	62	65	60	
	Q5	78	70	85	80	68	72	65	75	68	70	65	
	Q6	75	68	82	78	65	70	62	72	65	68	62	
	Q7	80	72	88	82	70	75	68	78	70	75	68	
	Q8	72	65	80	75	62	68	60	70	62	65	60	
	Q9	78	70	85	80	68	72	65	75	68	70	65	
	Q10	75	68	82	78	65	70	62	72	65	68	62	

When ordering an HPLA without load attachment plate, the bar is used as a replacement for the belt clamp. The threads in the carriage are accessible through holes in the bar for mounting your own attachments.

Technical data

2.6.1 LBB080 / LBB120 standard carriage with bar (T)

PLEASE REFER TO WWW.PARKERMOTION.COM
FOR UPDATED DIMENSIONAL INFORMATION



* The locking screws must stay in place or may be replaced by your own screws.

2.6.2 LBB080 / LBB120 extended carriage with bar (F)

PLEASE REFER TO WWW.PARKERMOTION.COM
FOR UPDATED DIMENSIONAL INFORMATION

													
120F	mm	500	90	125	195	305	375	410	32	M8	14	23	Ø 8,2

* The locking screws must stay in place or may be replaced by your own screws.

PLEASE REFER TO WWW.PARKERMOTION.COM
FOR UPDATED DIMENSIONAL INFORMATION

LBB	Unit	L	L1	L2	L3	L4	B	M	T	H	HT	D
180T	mm	400	130	180	220	270	50	M12	20	30	192,5	Ø12,5

PLEASE REFER TO WWW.PARKERMOTION.COM
FOR UPDATED DIMENSIONAL INFORMATION

1	2	3	4	5	6	7	8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28

Usable stroke: The usable stroke is the stroke needed for your application. It is always shorter than the stroke.


Technical data

Stroke: The stroke to be specified in the order code is the maximum mechanical stroke between the internal end-buffers. It consists of:

$$\text{Stroke} = \text{Usable stroke} + \text{right safety travel} + \text{left safety travel} + 20\text{mm}^{*4}$$

The right and left safety travel is in each case the safety travel which is required in order to slow the linear actuator to rest without hitting the mechanical end stop, using an emergency stop ramp after hitting a limit switch. F shows the transferable thrust force (see **Table 9**) for each actuator and may not be exceeded. In the event that the braking force resulting from the maximum braking torque of the drive or brake is less than F, you will need a longer safety travel. The delay time of the control unit must also be taken into consideration. Where appropriate, additional shock absorbers may need to be mounted.

2.7.1 Establishing required safety travel

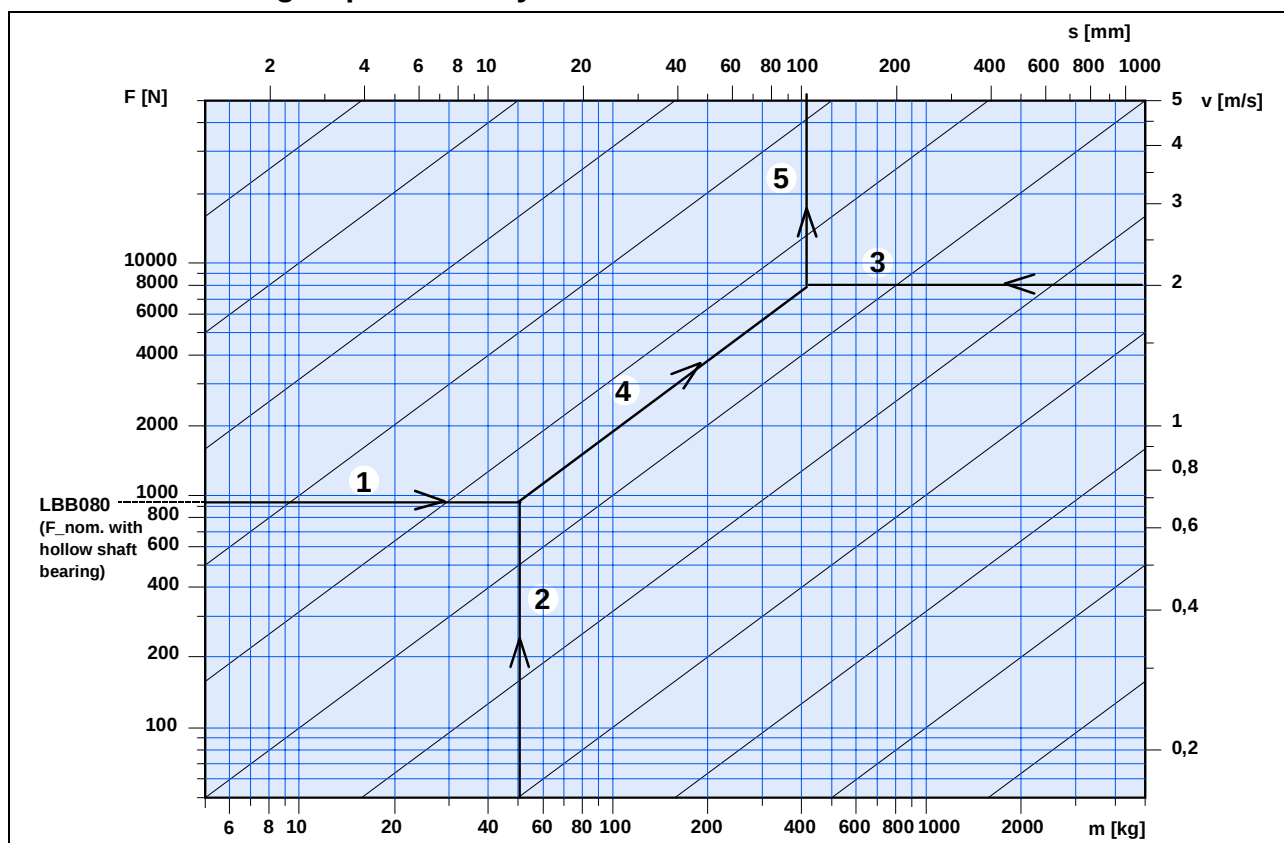

Key:

- m:** Effective load in kg (for an HPLA with rack-and-pinion drive please add the weight of the motor and the gearbox to the effective load)
- v:** Velocity of linear actuator before slowing down in m/s.
- F:** Braking force of drive during the emergency stop ramp in N.
- s:** The required safety travel s in mm that results from the moved weight, velocity and braking force.

Example:

The example in the diagram shows the determination of a safety travel for a HPLA80 with 50 kg effective load (2), slowed-down from a velocity of 2 m/s (3) with the permissible thrust force for this actuator F_{nom} (925 N) (1). The required safety travel is then approximately 110 mm (5).

^{*4} We recommend to add approximately 10mm additional travel on each side as compensation for the hysteresis of the limit switches or - depending on the control unit - as additional travel for a software limit stop.

3 Start-up

3.1 General

If you have ordered the HPLA standard actuator with drive and initiators, then this will be supplied completely mounted and ready for operation.

Spliced or jointed HPLA actuators and dual actuators will be supplied in a dismantled state for delivery and safety reasons. (Assembly instructions in chapters 5.9 and 5.10).

If you have not planned to use a Parker drive, attach your motor-gearbox combination according to the manufacturer's details which apply.

The fitting position of the HPLA is always horizontal and with the profile opening facing upwards, unless planned otherwise.



Note

If the actuator is fitted vertically, ensure that the drive is on top. This is due to the elastic properties of the drive belt.

3.2 Support structure preparation

Each point of support must be level and parallel to within 0.2 mm.

All support points must be aligned to one another with a parallelism better than 0.5 mm.

In the case of dual actuator systems, parallelism of 0.2 mm between the actuators must be guaranteed.

Ideal distance between supports (for deflection of approx .1 mm)

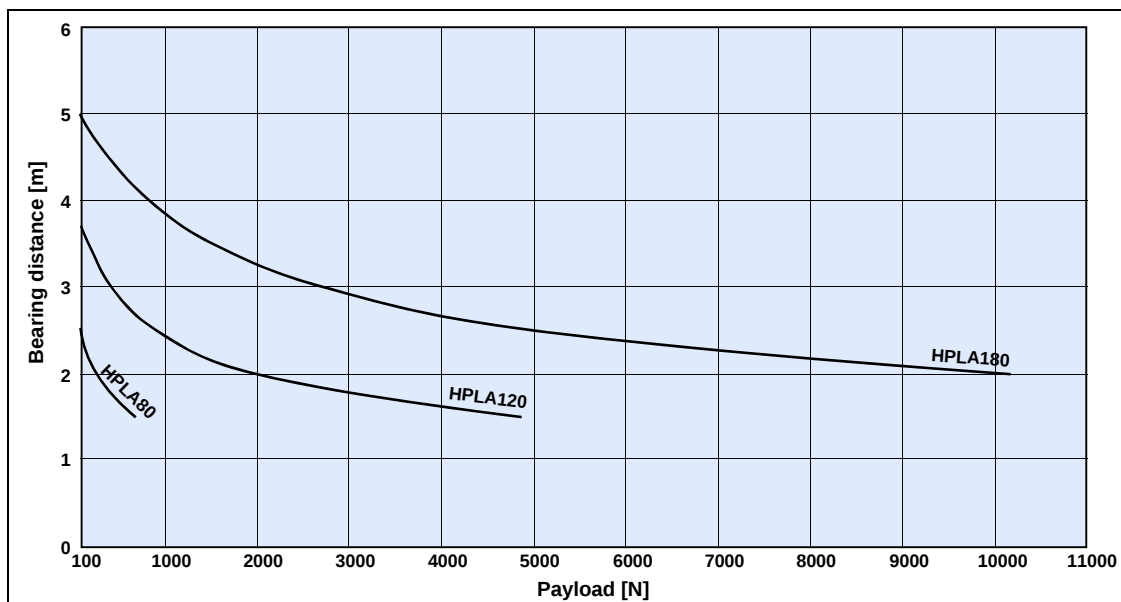


Diagram 2: Ideal distance between supports (for deflection of approx 1 mm)

To simplify mounting and adjustment, the support points for the HPLA fastening can consist of adapter plates which can be aligned using adjustment and clamping screws.

3.3 Installation



Caution

Take care when transporting long actuators. Deflection can badly affect the guidance. Equally, the profile can change and adversely affect the performance of the carriage.



Note

When the HPLA is being fitted, with the carriage projection upwards, do not remove the adhesive film until the conclusion of all assembly work in order to avoid dirt getting into the interior of the HPLA.



Note

When installing the HPLA, make sure there is adequate access to the tensioning station and the carriage for maintenance purposes! (There have to be enough place behind the tensioning station to put out the carriage completely).

3.3.1 Installing a single actuator

1. Remove the actuator from the transportation box.
2. Place the HPLA on the levelled connection points (spirit level, levelling instrument).
3. Attach the actuator. To do this, place sliding blocks in the t-slot groove of the profile and fasten with screws. Do not drill the profile!
4. Attach the add-on accessories.
5. Remove the dust cover (adhesive film).

3.3.2 Installing a dual actuator

1. Remove the actuator from the transportation box.
2. Place the HPLA on the levelled connection points (spirit level, levelling instrument).
3. Attach the actuator. To do this, place sliding blocks in the t-slot groove of the profile and fasten with screws. Do not drill the profile!
4. Attach the second actuator and fasten loosely.
5. Measure the parallelism (e.g. by tape measure) (see **Figure 1**).
6. Measure both diagonals to check that it is square (tape measure) (see Figure 1). If necessary, correct the diagonal measurement by parallel movement of the second actuator.
7. Check the horizontal orientation of both actuators to one another (spirit level, levelling instrument), and correct if necessary.
8. Finally, fasten the second actuator.
9. Attach the add-on accessories.
10. Remove the dust cover (adhesive film).

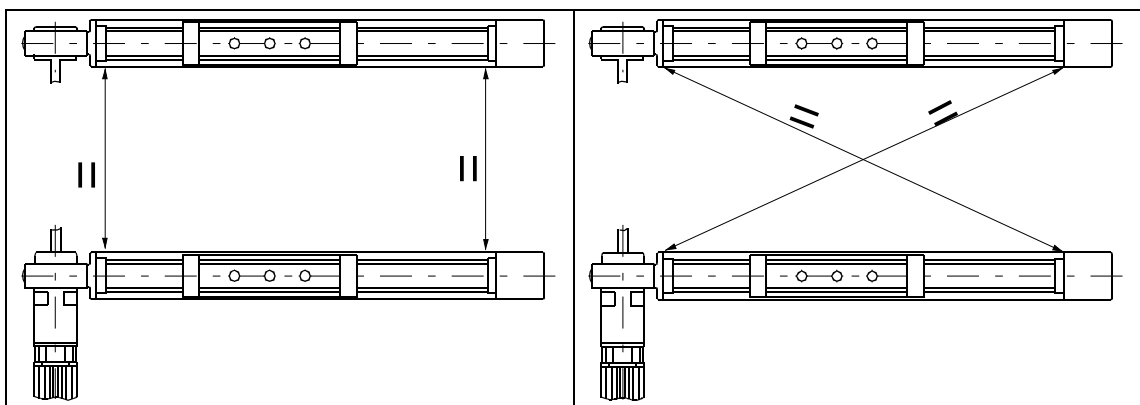


Figure 1: Aligning a dual actuator



Note

When installing the actuator vertically, the above procedure must be modified accordingly.

3.4 Initiators/sensors

3.4.1 General

The HPLA linear actuator is available with two different initiator variants.

1. Version with three initiators:

If you have ordered the linear actuator together with three initiators and termination box, they will be supplied completely wired. The position of initiators have to be adjusted by customer.

	Note Some servo controls (e.g. COMPAX S from Parker) operate with a software end limit. With the COMPAX S, for example, this lies 10mm in front of the initiators. To find out the measurement for the software end limit of your control, please refer to its documentation.
---	--

2. Version with one initiator as machine home:

If you have ordered the linear actuator together with one initiator, ensure that your controller has software end limits (end limits can be programmed). The maximum travel distance in both positive and negative directions is then defined via these limits.

The initiator in this version is wired directly to the controller.


General recommendation: The following safety distances should be maintained:

1. Calculation of safety travel: see chapter 2.7.1
2. If you require a smaller safety travel, please contact Parker.

	Note The usable stroke of the linear actuator can be calculated by: Usable stroke = stroke - (right safety travel + left safety travel + 20mm).
---	--

3.4.2 Version with three initiators

3.4.2.1 Wiring initiators/sensors

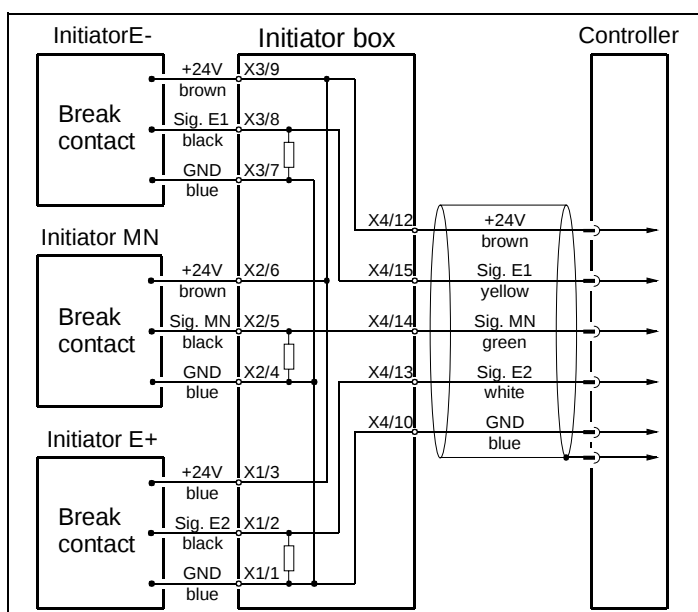

If the HPLA is supplied with initiators and a termination box, then the components will be wired according to Figure 2.

Dependent upon the order request, a cable configured as follows will be connected to the termination box.

To connect the cable to your controller, refer to the corresponding handbook.

Figure 2: Connecting the position initiators; MN: Machine-zero; Sig.: Signal

3.4.2.2 Setting up the end limits

**Note**

Generally the tripping plate, initiators and distributor box are attached on the same side as the motor.

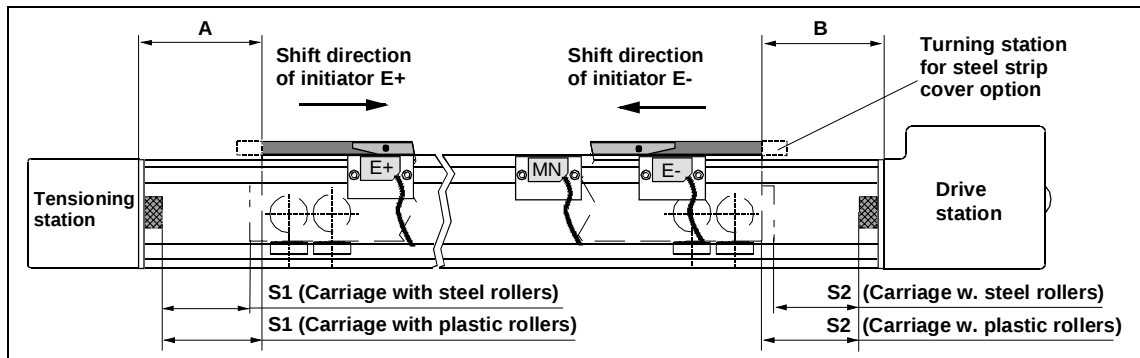


Figure 3: External initiators: setting up end limits and safety distances

Dimen- sions	Unit	HPLA80 with plastic rollers		HPLA80 with steel rollers	
		Standard	Steel strip cov. opt.	Standard	Steel strip cov. opt.
A	mm	23 + S	58 + S	33 + S	68 + S
B	mm	23 + S	58 + S	33 + S	68 + S

Table 1: Distances for setting up the external initiators on the HPLA80. Calculation of safety travel S, see chapter 2.7.1.

Dimen- sions	Unit	HPLA120 with plastic rollers		HPLA120 with steel rollers	
		Standard	Steel strip cov. opt.	Standard	Steel strip cov. opt.
A	mm	25 + S	70 + S	38 + S	83 + S
B	mm	25 + S	70 + S	38 + S	83 + S

Table 2: Distances for setting up the external initiators on the HPLA120. Calculation of safety travel S, see chapter 2.7.1.

Dimen- sions	Unit	HPLA180 with plastic rollers		HPLA180 with steel rollers	
		Standard	Steel strip cov. opt.	Standard	Steel strip cov. opt.
A	mm	33 + S	133 + S	53 + S	153 + S
B	mm	33 + S	133 + S	53 + S	153 + S

Table 3: Distances for setting up the external initiator on the HPLA180. Calculation of safety travel, see chapter siehe 2.7.1.

Setting up the end limits E- and E+

1. Attach the tripping plate centrally on the load attachment plate using the screws supplied.
2. Arrange the limit switches according to the sequence shown in **Figure 3**.
3. **E-:** Bring the carriage with the load attachment plate into position as Figure 3 and Table 3 (dimension B). Move limit switch E- from the drive station in the direction of the tensioning station until it operates
4. **E+:** Bring the carriage with the load attachment plate into position as in Figure 3 and Table 3 (dimension A). Move limit switch E+ from the tensioning station in the direction of the drive station until it operates
5. Make sure that the carriage runs smoothly. The distance between the tripping plate and the limit switch should be approximately 1.5 mm with electronic sensor switches (see manufacturer's details).

Setting up the machine zero point MN

The sensor switch for the machine zero point is fitted approximately 150mm away from the limit switch E- in the direction of the tensioning station. The distance between the tripping plate and the limit switch should be approximately 1.5 mm with electronic sensor switches (see manufacturer's details).

3.4.3 Version with one initiator

If only one initiator is used, ensure that this is used as the machine zero point initiator.

3.4.3.1 Wiring the initiator

As was mentioned above, the initiator is connected directly to the controller. The wiring should be undertaken in accordance with the appropriate product documentation.

3.4.3.2 Setting up the end limits

The maximum travel distance in both the positive and negative direction is defined by the software end limits (end limits can be programmed). The machine zero point initiator must always be within the software end limits.



Caution

The software end limits are not usually pre-set. They must therefore be defined before start-up and entered in the control unit (e.g. COMPAX S produced by Parker: Parameters P11 and P12 in the COMPAX Product Manual, configuration chapter).



Note

Recommendation: The real zero point of your controller should be the **same** as the machine zero point.

4 Maintenance

4.1 Maintenance schedule


When	What	Action	Removal
After start-up	Carriage	Carry out check for play and adjustment.	Chapter 5.4
	Timing belt	Carry out check for pre-tension and adjustment.	Chapter 5.2.3
One week later after timing belt was tensioned	Timing belt	Measure the timing belt tension. If the tension is less than $0.9 \times$ operating tension, then increase timing belt tension to $1.1 \times$ operating tension.	Chapter 5.2.3
Weekly	Linear actuator	Clean all affected parts dependent on the type of dirt (Guidance, carriage, tensioning station, drive station) If there is a considerable contamination clean daily. If there is a great deal of contamination, consider retrofitting a steel strip cover.	Chapter 5.11.1.2
Every six months	Timing belt	Check pre-tension, adjustment and wear. Judge the wear on the timing belt through a visual check. If there is a large amount, then change the timing belt. If abnormal timing belt wear is found, then using chapter 4.3, the cause(s) can be found and removed.	Chapter 5.2
	Carriage	Check the carriage play	Chapter 5.4.2
	Plastic rollers	Check for wear	Chapter 5.4.4
	Steel rollers	Lubricate guide	Chapter 5.5

Table 4: HPLA maintenance schedule

4.2 Replacement intervals for steel strip cover wearing parts

Travel	Item	Action	Removal
2500 km	Felt wiper	Replace	Chapter 5.11.1.4
11000 km	Running bar/baffle	Replace	Chapter 5.11.1.5
18000 km	Steel strip	Replace	Chapter 5.11.1.3

Table 5: HPLA wearing parts with steel strip cover

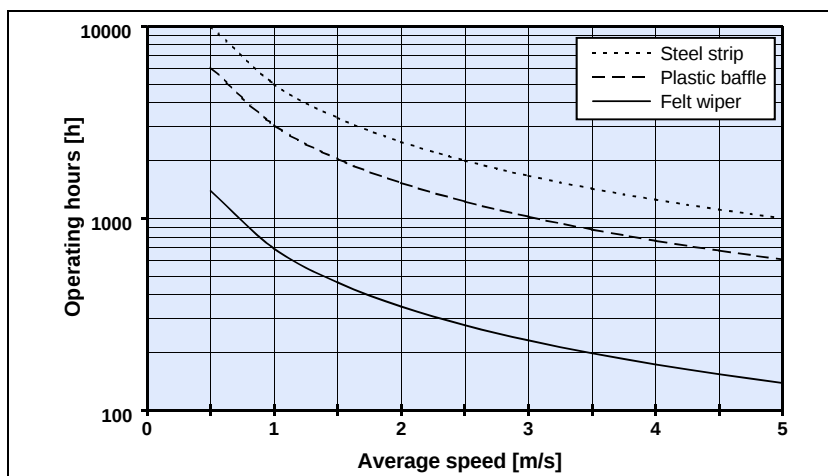

The diagram on the left shows the conversion from the maximum permitted travel given in Table 5 into operating hours based on average travel speed.

4.3 Causes of abnormal timing belt wear

The appearance of a certain amount of wear can have several causes, therefore it is not always possible to come to a clear conclusion. The following table shows the possible causes of typical faults:

Error type	Cause	Removal
Abnormal wear on loaded tooth profiles	Incorrect belt tension	Change the timing belt, adjust the pre-tension Chapter 5.2.
	Overload	Change the timing belt, adjust the pre-tension Chapter 5.2 Check whether the load is within the permitted range.
Abnormal wear on the tooth flank of the belt	Pre-tension too great	Change the timing belt, adjust the pre-tension Chapter 5.2
	Drive torque too high	Check the drive ratings
Abnormal wear on the toes of the belt	Incorrect timing belt orientation	Change the timing belt, adjust the pre-tension Chapter 5.2
	Edge of the roller/pulley deformed	Change the roller/pulley
Shearing of belt teeth	Pre-tension too low Overload (through collision)	Change the timing belt, adjust the pre-tension Chapter 5.2
Tears in the belt teeth	Incorrect belt tension	Change the timing belt, adjust the pre-tension Chapter 5.2
	Overload	Change the timing belt, adjust the pre-tension Chapter 5.2 Check whether the load is within the permitted range.
	Ageing of the belt material	Change the timing belt, adjust the pre-tension Chapter 5.2
Breaking of the timing belt	Incorrect belt tension	Change the timing belt, adjust the pre-tension Chapter 5.2
	Overload	Change the timing belt, adjust the pre-tension Chapter 5.2 Check whether the load is within the permitted range.
Softening of the belt material	Operating temperature too high	Change the timing belt, adjust the pre-tension Chapter 5.2 Lower operating temperature
	Contact with solvents	Change the timing belt, adjust the pre-tension Chapter 5.2 Do not clean the belt using solvents
Jumping over teeth, loss of machine zero point	Pre-tension too low Incorrect motor position (i.e. bottom) in vertical application	Adjust pre-tension correctly. If possible, have drive at the top. Alternatively increase pre-tension or reduce load in longitudinal direction

Table 6: Causes of abnormal tooth wear

5 Assembly/repair

Use only genuine replacements parts from Parker Hannifin.

In the case of incorrect repair, no claims will be possible under the guarantee.

For help with problems:

Parker Hannifin GmbH
EMD - HAUSER
Mechanical production
Service department

(Germany) +49(0)781 509-381

5.1 Safety notices

Before carrying out maintenance and repairs, turn the main switch to '0' or 'off' and secure it against being switched on again by means of a padlock. If the machine must remain ready for operation during certain repair work, particular care must be taken. Make sure that there is no possibility of personnel staying in the danger area; if necessary, secure against unauthorised access by additional barriers.

Repairs may only be carried out by authorised engineers or by Parker personnel.

Work on the electrical equipment may only be carried out by engineers qualified for such work - the relevant regulations must be followed (IEC..., EN..., national accident prevention regulations).

Where it is necessary to dismantle safety devices during set up, repair and maintenance work, the safety devices must be refitted immediately on conclusion of the work. The machine must be disabled before disassembly.

As the whole system can be exposed to steady-state vibration during operation, all screws and nuts must be secured.

For this, the following are used, dependent on the situation:

Loctite 243 or a Schnorr lock washer. Unless otherwise indicated, use Loctite 243.


5.2 Changing, tensioning and aligning the timing belt

5.2.1 General information on the timing belt

1. Unpack new timing belts immediately. They must be stored in a circular shape at room temperature in a dry store.
2. Timing belts must not be kinked.
3. The pitches of the timing belt and the pulley must match.
4. Long-term temperatures of a maximum of 80° C are permitted. In the short term, the temperature can reach 120° C.
5. The drives must be protected from dust, dirt, hot water and steam as well as acids and alkalis.

5.2.2 Changing the timing belt

1. Move the carriage to a reference point (e.g. machine zero, real zero ...). Mark the carriage position on the HPLA profile (felt pen).
2. If necessary, remove the steel strip cover (chapter 5.11)

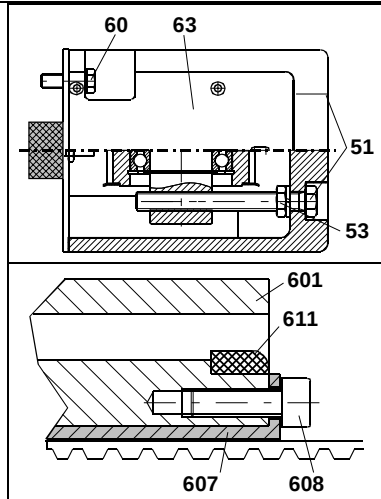



3. Slacken the timing belt: Remove the dust cover (63) of the tensioning station. Loosen the lock-nut (53). Loosen the tensioning screws (51) approximately 10 turns

4. Loosen the timing belt clamp:
Remove the screw (608). Completely pull out and remove the bracket. If the bracket is tight and cannot be loosened, then the load attachment plate must be removed.

5. Cutting down the new timing belt:

There are three possible ways of establishing the length of the timing belt.

- Cut down the new timing belt according to the associated piece list
- Measure the profile length and calculate the belt length using the **Formula 1**

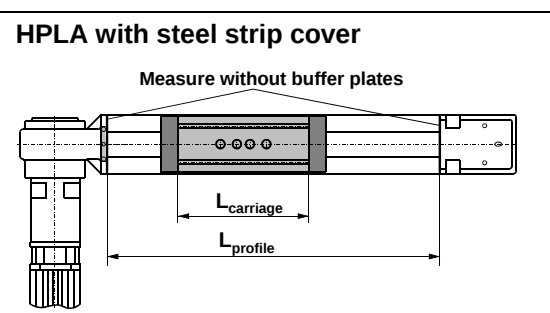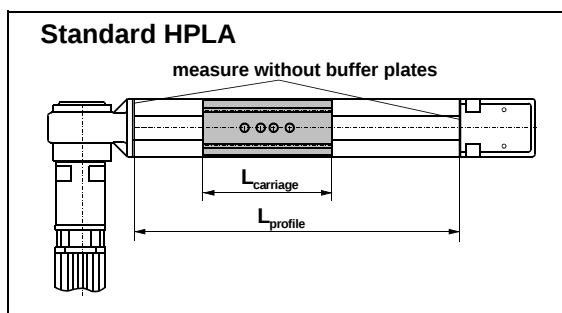

$$\text{Belt length} = 2 \times L_{\text{profile}} - L_{\text{carriage}} + K$$

Formula 1: calculating the timing belt length

Type	K
HPLA80	570mm
HPLA120	740mm
HPLA180	1190mm

Table 7: Correction value K for calculation of the belt length

- Pull out the old timing belt from the HPLA and lay it out on the floor. Lay the new timing belt next to it and check the length of the old one to the new. In the case of differences in pitch, transfer the pitch from the old belt to the new.

6. Thread up the new timing belt.



Note

If the old timing belt has not yet been removed from the actuator, the new one can be attached to the old one using adhesive tape and pulled through.

- Push the timing belt between the carriage and the load attachment plate. Insert the timing belt retaining bracket (607) and secure it with the screw (608).
- Tensioning the timing belt: see Chapter 5.2.3
- Aligning the timing belt: see Chapter 5.3.
- Fasten the dust cover (63).
- If necessary, fasten the steel strip cover: see Chapter 5.11
- Setting up the reference point: see Chapter 5.4.6

5.2.3 Tensioning the timing belt

5.2.3.1 Fundamentals



Note

The timing belt pre-tension must be adapted to the operating loads, however it may not exceed the maximum permitted values for setting the tension stated in Table 1⁵.

The timing belt tension to be set depends on the force required to be transferred by the timing belt F_x ($F_x = F_{static} + F_{dynamic}$)

In order to stop the timing belt jumping, the timing belt pre-tension (operating tension) must be approximately 10% above the force to be transmitted F_x .

In the case of new or old slackened timing belts, the pre-tension will reduce by about 20% a short time after first being tensioned. Therefore on tensioning the belt, a tension should be set which is approximately 1.25 times the operating tension. This tension is defined in **Table 9** as the tension to be set.

Here in **Table 9**, a differentiation is made between standard values and the maximum permitted values which are based respectively upon different statements of operating life for the drive system.

	Standard value	Maximum permitted values
Service life	20.000 hours	6.000 hours
Average speed	1,5 m/s	1,5 m/s

Table 8: Service life used as a basis for drive units

For this reason, the standard value should be set first of all if the application allows. If at the standard value set, the upper and lower timing belt touches, then the belt tension should be increased in stages until the belt can no longer touch. The belt tension may not, however, exceed the maximum permitted value from **Table 9**.

In the case of dual actuators, if the load is applied symmetrically between the actuators, the belt tension can be halved.

If the tension of a timing belt which has been in operation for more than a week is less than $0.9 \times$ the operating tension, then the timing belt tension must be increased to $1.1 \times$ operating tension (**Table 9**).




Note

HPLA systems are already pretensioned at the respective standard value when supplied.

⁵ If you want to exceed these values, please contact Parker.

HPLA	Stöber-gearboxtype / bearing	Standard values				Maximum permitted values			
		F _{xmax} [N] maximum transfer- rable force	Tension to be set [N]		Operat. tens. [N] varies with time	F _{xmax} [N] maximum transfer- rable force	Tension to be set [N]		Operat. tens. [N] varies with time
80	Hollow shaft with P3 / P4/DD	925	1272	1119	1017	1114	1531	1348	1225
	P3 N ⁶	474	651	573	521	602	828	729	662
	P3 V ⁷	925	1272	1119	1017	1114	1531	1348	1225
	P4 N ⁶	557	766	674	613	671	922	812	738
	P4 V ⁷	925	1272	1119	1017	1114	1531	1348	1225
	SR ⁸ , SL ⁹ , SB ¹⁰	925	1272	1119	1017	1114	1531	1348	1225
	LR ¹¹ , RL ¹²	925	1272	1119	1017	1114	1531	1348	1225
	PE4	500	687	605	550	600	825	726	660
	PE5	675	928	817	743	900	1237	1089	990
120	Hollow shaft with P4 / P5/DD	1696	2332	2052	1865	2234	3072	2703	2457
	P4 N ⁶	627	862	759	690	905	1244	1095	995
	P4 V ⁷	1514	2081	1831	1665	2014	2769	2436	2215
	P5 N ⁶	1059	1456	1281	1165	1529	2102	1850	1682
	P5 V ⁷	1696	2332	2052	1865	2234	3072	2703	2457
	SR ⁸ , SL ⁹ , SB ¹⁰	1696	2332	2052	1865	2234	3072	2703	2457
	LR ¹¹ , LR ¹²	1696	2332	2052	1865	2234	3072	2703	2457
	PE5	675	928	817	743	900	1237	1089	990
180	Hollow shaft with P5 / P7/DD	4169	5732	5045	4586	5457	7504	6603	6003
	P5 N ⁶	1160	1595	1404	1276	1519	2089	1838	1671
	P5 V ⁷	2513	3456	3041	2765	2513	3456	3041	2765
	SR ⁸ , SL ⁹ , SB ¹⁰	3770	5184	4562	4147	3770	5184	4562	4147
	LR ¹¹ , LR ¹²	3770	5184	4562	4147	3770	5184	4562	4147
	P7 N ⁶	1654	2274	2000	1819	2164	2975	2618	2380
	P7 V ⁷	3561	4896	4309	3917	4398	6047	5322	4838


Table 9: Recommended and maximum permitted belt tension (tolerance area ±5%).

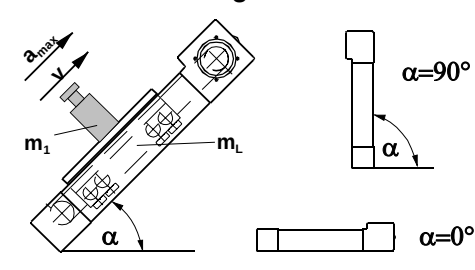Determining the force F_x		The installation is stationary:		F _x force arising [N] F _{static} static force [N] F _{dynamic} dynamic force [N] m _L Mass of carriage [kg] m ₁ Mass of load [kg] α Angle between surface plane and HPLA [°] a _{max} maximum acceleration [m/s ²]
		$F_x = F_{static}$ $F_{static} = (m_L + m_1) * 9,81 * \sin \alpha$ The installation is in acceleration/deceleration: $F_x = F_{static} + F_{dynamic}$ $F_{static} = (m_L + m_1) * 9,81 * \sin \alpha$ $F_{dynamic} = (m_L + m_1) * a_{max}$		

PLEASE NOTE THIS IS FOR MAINTENANCE/REFERENCE
PART#'S NOMENCLATURE IS HAUSER GERMANY OFFERING.
PLEASE REFER TO WWW.PARKERMOTION.COM FOR USA
PART# NOMENCLATURE

- ⁶ N: Stöber gearbox with normal bearings
⁷ V: Stöber gearbox with reinforced bearings
⁸ SR: Shaft on right
⁹ SL: Shaft on left
¹⁰ SB: Shaft on both sides
¹¹ LR: Gearbox on left with an additional output shaft on right
¹² RL: Gearbox on right with an additional output shaft on left

5.2.3.2 Checking and adjusting the belt tension

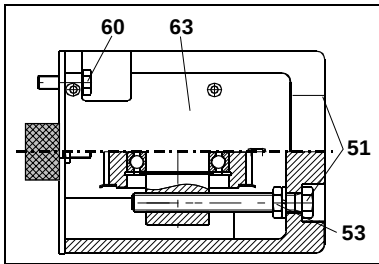

1. If necessary, remove the steel strip cover (chapter 5.11.1.1)
2. Measure timing belt tension (chapter 5.2.3.3).
3. Compare the tension with the required value from **Table 9**
4. If the actual timing belt tension is less than $0.9 \times$ operating tension, then the timing belt tension must be corrected. To do this, remove the dust cover (63) and loosen the lock-nut (53).

5. Adjusting the timing belt tension:
Move towards the recommended tension by alternately adjusting and checking. To tension, simultaneously turn both tensioning screws (51) clockwise.
6. Align the timing belt: see chapter 5.3.
7. If necessary, replace the steel strip cover: see chapter 5.11

5.2.3.3 Measuring the timing belt tension

The measuring procedure described below is currently the only way to measure the timing belt tension to the required tolerance of $\pm 5\%$.


**Belt tension measuring device RSM**

The RSM belt tension measuring device gives the existing belt tension based on data previously supplied (specific to belt mass, free running belt length) and the oscillation frequency of the belt. (RSM: order number 037- 000201).

5.3 Checking the belt run and aligning the timing belt

**Note**

If the timing belt has to be re-tensioned, then this must be done before aligning. Exact alignment is only possible while the carriage is running. On reversing the direction of travel, it must start running towards the opposite flange. This means that with correct adjustment, the timing belt will always oscillate from left to right (looking in the direction of movement). In order to maintain the timing belt pre-tension, only adjust the tensioning screws in small stages. If necessary, check the timing belt tension again after alignment.

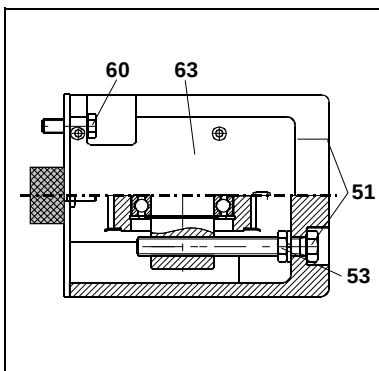


1. Remove the dust cover (63).
2. Check the running of the belt by moving the carriage (manually, if possible - otherwise at reduced speed). If the running of the belt is correct according to the above definition:
3. Replace the dust cover (63).
4. Otherwise: Loosen the lock-nut (53). Loosen the tensioning screw (51) anti-clockwise in small stages on the side on which the timing belt continually appears, until the timing belt runs in accordance with the above definition.
5. Tighten the lock-nuts (53) and replace the dust cover (63).

5.4 See Appendix A for screw torque values

Adjusting the carriage play

5.4.1 Flow chart for changing and adjusting the wheels

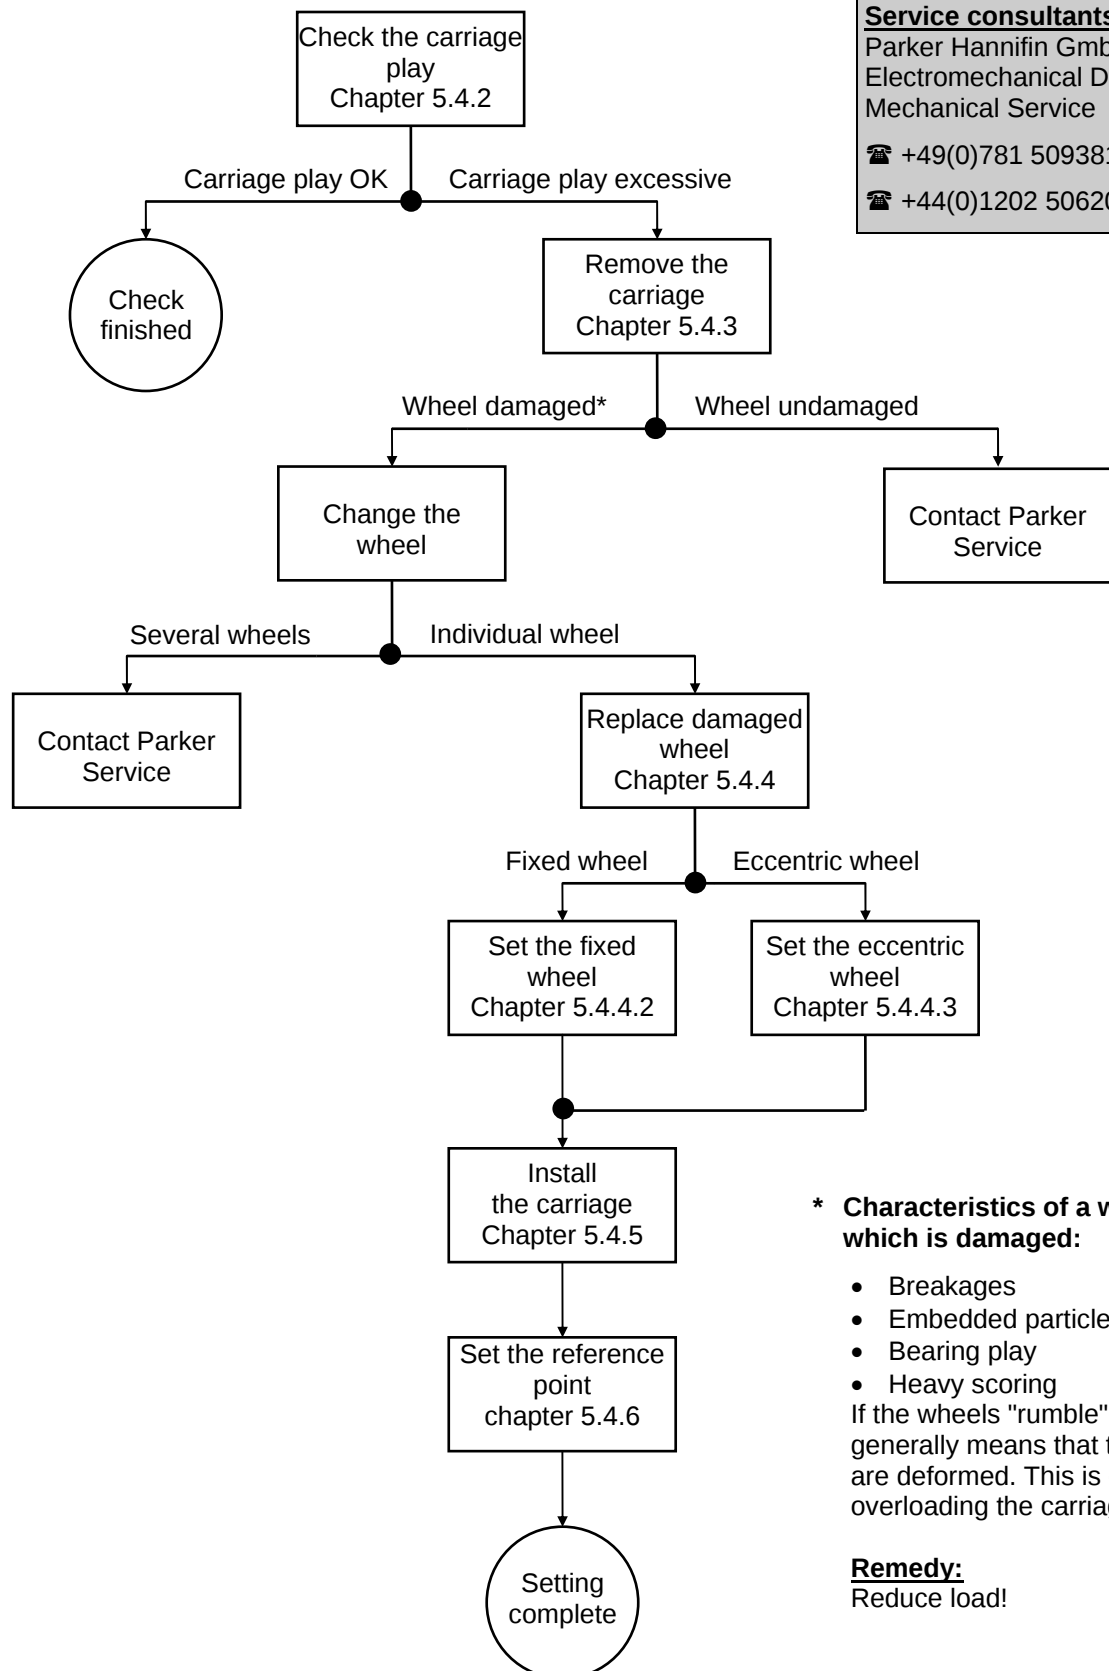

Service consultants

Parker Hannifin GmbH
Electromechanical Division
Mechanical Service

☎ +49(0)781 509381 (Germany)

☎ +44(0)1202 506200 (UK)

* Characteristics of a wheel which is damaged:

- Breakages
- Embedded particles of dirt
- Bearing play
- Heavy scoring

If the wheels "rumble", then this generally means that the wheels are deformed. This is caused by overloading the carriage.

Remedy:

Reduce load!

5.4.2 Checking the carriage play



Note

You can gain a rough idea of possible carriage play by trying to move the carriage or the mounted installation. A more exact method is described in the following procedure:

1. Arrange to be able to move over the greatest possible travel.
2. Remove the steel strip cover if there is one: chapter 5.11.
3. In order to move the carriage by hand and to be able to see the wheels, remove the load attachment plate and the load from the carriage.
4. Remove the timing belt from the carriage: chapter 5.2.2 point 4.
5. Push the carriage over the complete travel. All wheels must turn during travel.
6. To check the pressure acting against it, prevent the wheels from turning using your index finger; it should be possible to stop them with minimal force.

Characteristics of a correctly adjusted carriage:

- The carriage has no play
- The carriage can move over the whole travel area without any great difference in force
- The carriage can be inserted into the profile without excessive pressure (requires dismantling of the tensioning station, see below)



Note

Jockey wheels which are adjusted too tightly develop pressure marks which lead to running noise and wheel defects. Replace defective wheels (see below).


5.4.3 Removing the carriage



Danger

If the actuator is used in a vertical position, secure the carriage against movement. If the carriage is not secured, then it may fall downwards as a result of gravity. This can result in damage to personnel or property.

1. Move the carriage to a reference point (e.g. machine zero or real zero). Mark the carriage position on the HPLA profile (use a felt pen).
2. If necessary, remove the steel strip cover (chapter 5.11)
3. Remove any attachments from the carriage.

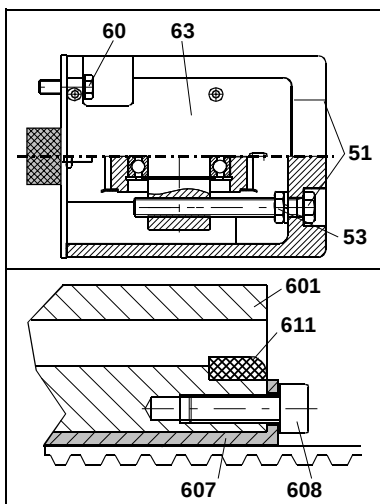

4. Slacken the timing belt: Remove the dust cover (63) of the tensioning station. Loosen the lock-nut (53). Loosen the tensioning screws (51) by approximately 10 turns
5. Loosen the timing belt clamp: Remove the screw (608). Completely pull out and remove the bracket. If the bracket is tight and cannot be loosened, then the load attachment plate must be removed.

6. Remove the tensioning station by loosening the four fixing screws (60).
7. Mark the carriage with an arrow pointing towards the motor end and pull the carriage out of the profile.



Note

Re-insert the carriage later in the same direction, otherwise the wheel adjustment will be wrong!

5.4.4 Changing individual wheels

5.4.4.1 General

- The procedure is the same for changing both types of wheel - plastic and steel roller guidance versions. We would however point out that additional care must be exercised when working with steel wheels.
- The wheels of the plastic roller guidance version consist of ball bearings with a plastic casing. The steel rollers have integrated ball bearings and spherical bearing races.
- The ball bearings used in the plastic wheels correspond to the standard roller bearing standards and are lubricated for life.
- If they remain at standstill for a long time, the plastic wheels develop small flattened areas which will completely return to shape after continuous use.
- Both wheel types can be used in environmental temperatures of -40°C to $+80^{\circ}\text{C}$.



Warning


It is only possible to check the wheel running during movement of the actuator. In doing this, particular care is required, as injury is possible. If possible, only move the actuator manually (if necessary, dismantle the motor and gearbox in advance and lay the actuator horizontally). If not, operate the actuator at a crawl using the jog button (speed $< 1\text{m/min}$).




Note

Experience and specialist knowledge is required to adjust a carriage correctly. Therefore wheels should, if possible, only be changed by Parker personnel.

5.4.4.2 Changing and adjusting rigid (concentric) wheels

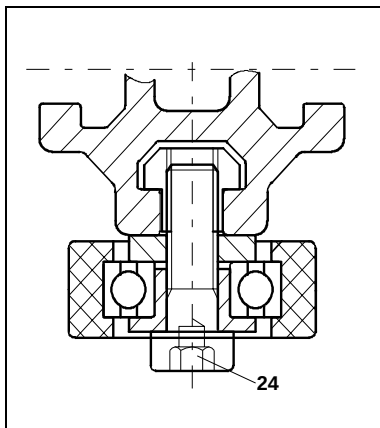

1. Remove the carriage (chapter 5.4.3)
2. Mark the position of the wheel on the carriage.
3. Loosen and remove the screw (24).
4. Remove the old wheel, and fit the new one in the correct position on the carriage.
5. Insert screw (24) with screw fastening (e.g. DELO ML5249) and tighten using the tightening torque M_a specified in **Table 10** page 35.
6. To check the rolling movement, make marks on the wheels using a felt-tip pen.

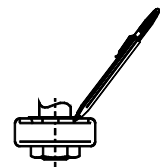

7. Remove any dirt and swarf from the running surfaces of the linear actuator.
8. Insert the carriage into the profile in the correct running direction and check the wheel adjustment along the whole of the travel. The wheels should turn along the whole travel.




Note


When adjusting the wheel play, only the wheels you have changed should be adjusted. If this means that a correct adjustment of the carriage is impossible, then the carriage must be completely re-adjusted. Experience and specialist knowledge is required for this work and it should therefore only be carried out by a Parker mechanical engineer.

9. To check the pressure acting against it, prevent the wheel from turning using your index finger; it should be possible to stop a wheel using minimal force.
10. If the adjustment is correct, finish the calibration work. Otherwise correct the wheel adjustments.


5.4.4.3 Changing and adjusting the eccentric wheels

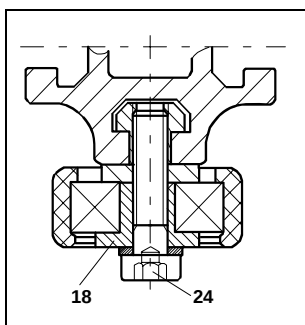


1. Remove the carriage (chapter 5.4.3)
2. Mark the position of the wheel on the carriage.
3. Loosen and remove the screw (24), remove the old lock washer.
4. Remove the old wheel and push out the eccentric bush (18).
5. Insert the eccentric bush into the new wheel, fit the parts on the screw (24) using a new lock washer. Slightly tighten the screw.

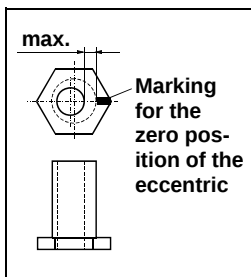

6. Align the position of the eccentric bush so that on turning the eccentric (18) clockwise, the wheel comes to the same slideway as the one that the old wheel was on before dismantling.

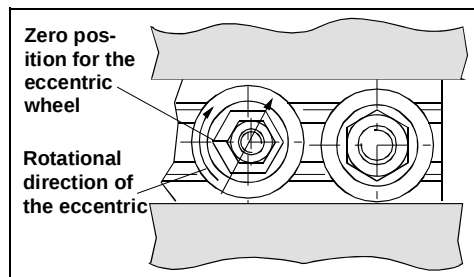

7. Tighten the screw (24) using tightening torque Ma according to **Table 10**.
9. To check the rolling movement, make marks on the wheels using a felt-tip pen.
10. Remove any dirt and swarf from the running surfaces of the linear actuator.
11. Insert the carriage into the profile in the correct running direction and check the wheel adjustment along the whole of the travel. The wheels should turn along the whole travel.

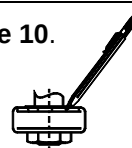**Note**

When adjusting the wheel play, only the wheels you have changed should be regulated. If this means that a correct adjustment of the carriage is impossible, then the carriage must be completely re-adjusted. Experience and specialist knowledge is required for this work and it should therefore only be carried out by a Parker mechanical engineer.

12. Adjust the eccentric of the jockey wheel in small stages so that the carriage can be pushed freely and without play through the HPLA profile. Jockey wheels which are adjusted too tightly develop pressure marks which lead to running noise.
13. To check the pressure acting against it, prevent the wheel from turning using your index finger; it should be possible to stop a wheel using minimal force.
14. If the adjustment is correct, finish the calibration work. Otherwise repeat points 10 and 11 until the carriage adjustment is correct.

HPLA	Rigid wheel / eccentric wheel
80	7 Nm
120	20 Nm
180	70 Nm

Table 10: Tightening torque of the wheel fastening screws

5.4.5 Installing the carriage

1. Place the carriage into the profile in the correct running direction.
2. Attach the tensioning station using 4 screws (60)
3. Attach the timing belt (chapter 5.2.2 from point 8 onwards)
4. Tension the timing belt (chapter 5.2.3, page 31)

5.4.6 Adjusting the reference point

Correct the machine zero point on the basis of the previously-marked carriage position. There are several ways of doing this depending on the motor and the controller. For further details, see the controller handbook.


5.5 Re-lubricating the steel guide

1. Disconnect the control unit.
2. Align the centre of the carriage to the position of the lubrication access hole.

	Warning Always check again that the control unit is disconnected because you will need to reach into the guide when re-lubricating!
---	--

3. Unscrew plugs from HPLA profile.

	Note Only use the following oil: Shell Omala Oil 220, order number: 180-006026.
---	--

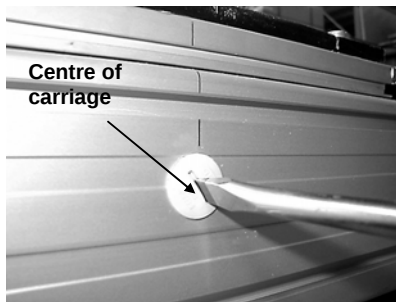

4. Push the lubrication gun through the access bore and push onto the nipple in the carriage.
5. Apply four to five strokes of re-lubrication.
6. Remove manual lubrication press and screw in the plug.




5.6 Changing or attaching the motor

	Danger Danger due to electrical voltage. Work on the motor terminal box may only be carried out by an electrical engineer.
---	---

5.6.1 Changing the motor in combination with a Stöber planetary gearbox

1. Move the carriage to a reference point (e.g. machine zero or real zero). Mark the carriage position on the HPLA profile (felt pen).

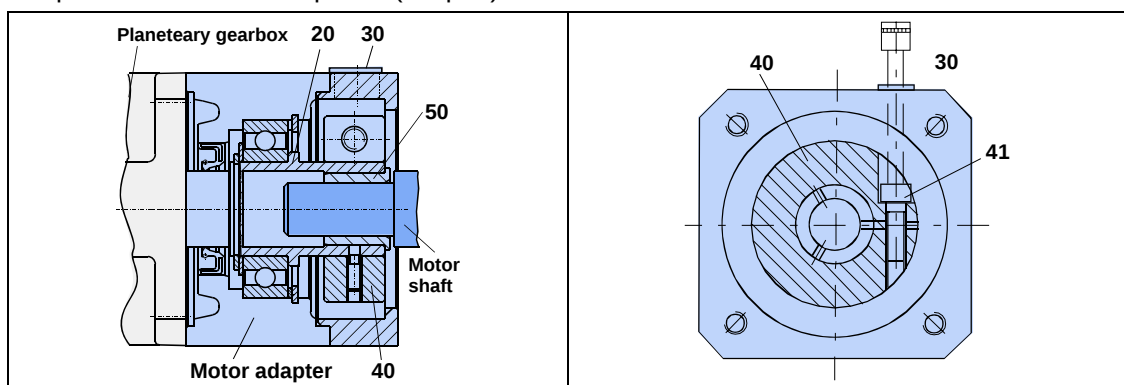

2. Switch off the actuator at the main switch and disconnect it from the electrical supply. Leave the motor and gearbox to cool.
3. Remove the motor and resolver cable.
4. Remove plug on assembly bore (30) of adapter housing
5. Unfasten the clamping screw (41) on the clamping ring; to do this guide extension of torque wrench through assembly bore (30)
6. Loosen the motor fastening.

7. Pull the motor away from the gearbox.

Attaching a (new) motor

1. Clean the motor shaft with de-greasing agent
2. If necessary, switch off the actuator at the main switch and disconnect it from the electrical supply. Leave the motor and gearbox to cool.
3. Place motor on adapter housing. NOTE - make sure that the motor shaft is fitted concentrically with the clamping hub (20) and/or clamping bush (50). Do not tilt!
4. Screw motor down to adapter housing
5. Tighten greased clamping screw (41) on to clamping ring; to do this guide extension of torque wrench through assembly bore (30). For tightening torque MA, see Table 11.
6. Re-seal assembly bore (30) with plug.
7. Connect motor and resolver cables - check the direction of rotation is correct.
8. Switch on the actuator.
9. Set up the reference point (chapter 5.4.6)

Tightening torques MA		
Clamp screw	Wrench dimensional s [mm]	MA [Nm]
M5	5	6
M6	5	10
M8	6	25
M10	8	45
M12	10	80


Table 11: Tightening torques for clamping screw

5.6.2 Further gearbox types

5.6.2.1 Shaft-hub connection via a shaft key

1. Move the carriage to a reference point (e.g. machine zero, real zero). Mark the carriage position on the HPLA profile (felt pen).
2. Switch off the actuator at the main switch and disconnect it from the electrical supply. Leave the motor and gearbox to cool.
3. Remove the motor and resolver cable
4. Loosen the motor fastening
5. Pull the motor away from the gearbox.
6. Clean the motor shaft and the sleeve shaft hole of all lubricant.
7. If the shaft key shows signs of damage, replace it.
8. Insert the key in the motor shaft.
9. Install the motor (if necessary, turn the motor in order to find the groove) and tighten the motor fastening (97).
10. Connect motor and resolver cables - check the direction of rotation is correct
11. Switch on the actuator.
12. Set up the reference point (chapter 5.4.6)

5.6.2.2 Claw coupling

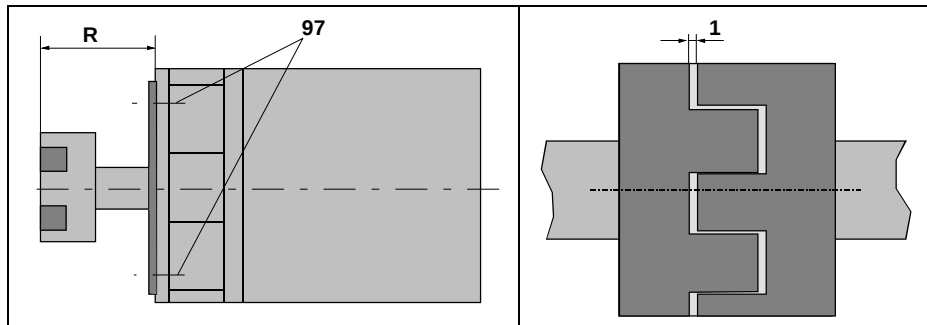

1. Move the carriage to a reference point (e.g. machine zero, real zero). Mark the carriage position on the HPLA profile (felt pen).
2. Switch off the actuator at the main switch and disconnect it from the electrical supply.
3. Remove the motor and resolver cable
4. Loosen the motor fastening
5. Pull the motor away from the gearbox
6. Measure distance R, dimension from the claw coupling to the motor flange (accuracy +/- 0.1 mm).
7. Loosen the clamp screw of the claw coupling half and pull this off the motor shaft.
8. Remove all traces of lubricant from the motor shaft and the hole of the claw coupling.
9. Place the claw coupling half on the new motor at the distance R. If necessary, rub down the motor shaft using emery paper, grade 360.




Note

There should be 1mm play in the axial direction between the coupling halves after mounting. Axial pressure must be avoided at all costs!

10. Tighten the clamp screws of the claw coupling.
11. Install the motor (if necessary, turn the motor in order to find the tooth spaces) and tighten the motor fastening (97).
12. Connect motor and resolver cables - check the direction of rotation is correct
13. Switch on the actuator.
14. Set up the reference point (chapter 5.4.6)

5.7 Changing the gearbox (pulley mounted on gearbox shaft)

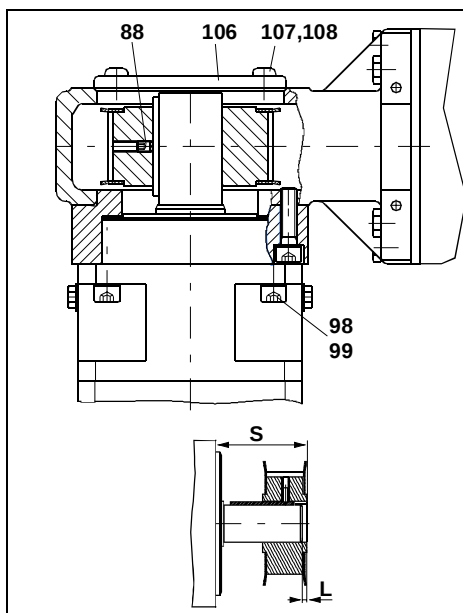

1. Dismantle the motor (chapter 5.6 continued, according to the gearbox used).
2. Slacken the timing belt (chapter 5.2.2 point 2-5).
3. Remove the cover plate (106).
4. Loosen the gearbox fastening (98) and carefully remove the gearbox.
5. Measure the distance S (distance from the upper edge of the pulley to the gearbox flange) or L (distance from the end of the shaft to the upper edge of the pulley) (accuracy +/- 0.1 mm).
6. Loosen the set screw (88) and carefully pull off the pulley (use claw puller).
7. Place the pulley on the new gearbox at the distance S (Table 12).



Caution

Press down the pulley using the thread in the shaft. DO NOT use a hammer on the shaft as this can damage the gearbox.

8. Measure the diameter of the core removing hole of the pulley tap. Using a twist drill 0.5mm smaller, drill carefully 1mm deep into the shaft key of the gearbox through the tap in the pulley. Remove any swarf.
9. Screw the set screw into the pulley using screw retention (Loctite).
10. Place the timing belt over the pulley.
11. Attach the gearbox to the linear actuator and tighten the gearbox fastening (98).
12. Tension the timing belt (chapter 5.2.3).
13. Fasten the cover plate (106).
14. Re-assemble the motor (chapter 5.5 continued, according to the gearbox used).

Gearbox type	Unit	HPLA80		HPLA120		HPLA180	
		S	L	S	L	S	L
Stöber P3	mm	38,0	5,5	---	---	---	---
Stöber P4	mm	43,0	1,5	55,5	-9,0	---	---
Stöber P5	mm	---	---	43,0	1,5	70,5	6,5

Table 12: Standard distances S (distance between pulley and gearbox flange) and L (distance between shaft and pulley)

5.8


PLEASE NOTE THIS IS FOR MAINTENANCE/REFERENCE
PART#'S NOMENCLATURE IS HAUSER GERMANY OFFERING.
PLEASE REFER TO WWW.PARKERMOTION.COM FOR USA
PART# NOMENCLATURE

Replacing the pulley


5.8.1 Replacing the pulley on the drive station

There are three different pulley bearing types in the drive housing:


1. Bearing with hollow shaft:
 - a) for single actuators
 - b) for dual actuators
 - c) for dual actuators with central drive
2. Bearing directly on shaft with dual actuators.
3. Pulley directly mounted on gearbox shaft.

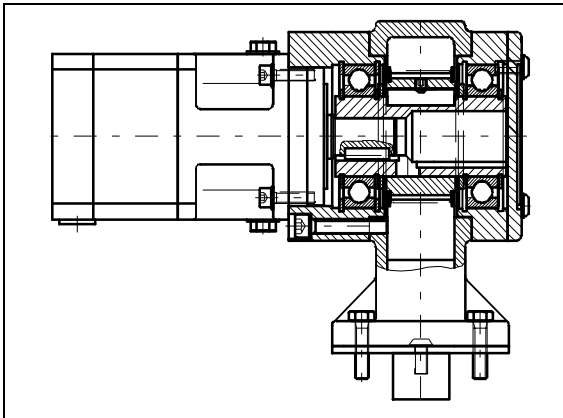


1a) Bearing with hollow shaft for single actuators.

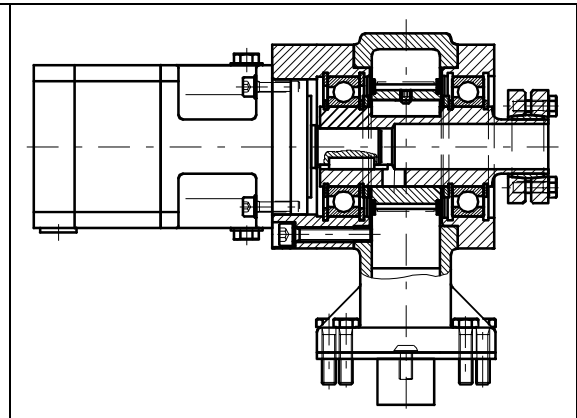


1b) Bearing with hollow shaft for dual actuators actuators.

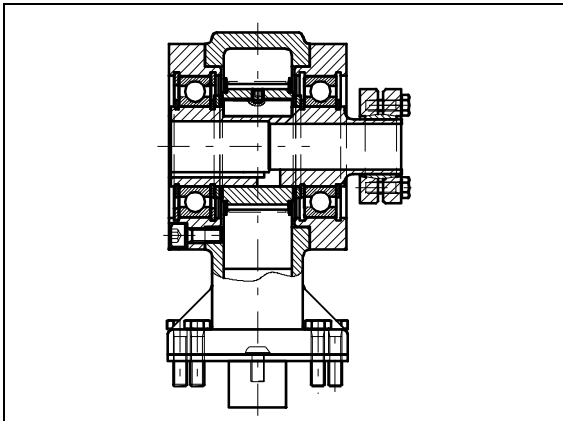

1c) Bearing for dual actuators with central drive

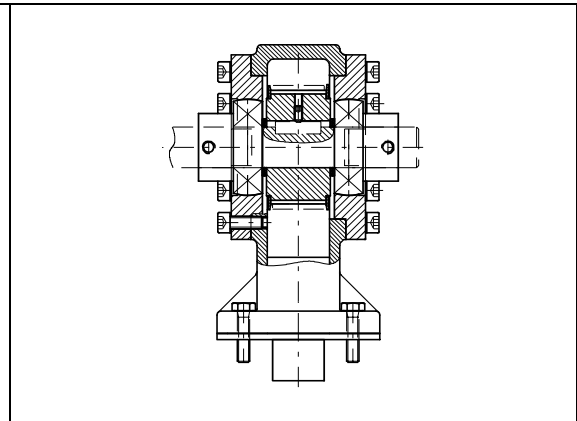


2) Bearing directly on shaft for dual actuators

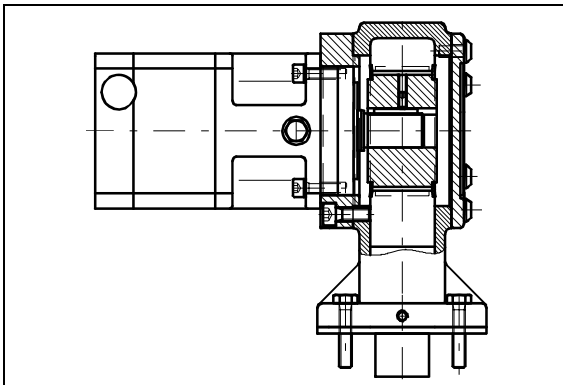


3) Pulley directly mounted on gearbox shaft.

The following chapters contain descriptions of how to replace the pulleys in each instance.

5.8.1.1 Pulley with bearings on a hollow shaft (1a, 1b and 1c)

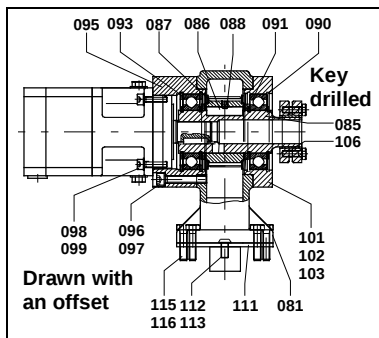


1. Slacken the timing belt: Remove the dust cover (63) of the tensioning station. Loosen the lock-nut (53). Loosen the tensioning screws (51) by approximately 10 turns.
2. When with a dual actuator, first support the coupling if necessary.
3. Depending on the size and weight of the drive, remove the motor and gearbox.
4. If necessary, unfasten shrink-fit washer (106) and remove from hollow shaft.

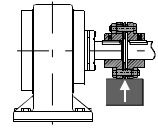


5. Unfasten screws (96) of intermediate flange and carefully take off flange (95) together with hollow shaft (85), bearings (90) and pulley (87).
6. Remove bearing (90). To do this, use special pliers to remove retaining rings (91).
7. Take off pulley (87). To do this, first unscrew threaded pin (88)
8. Check shaft key for damage and change if necessary
9. Insert new pulley, drill key and fix with threaded pin
10. For assembly, proceed in reverse order - during assembly, slightly tighten screws of shrink-fit washer and then tighten to tightening torque Ma one after another and in small stages (1/4 revolution) (for tightening torque values, see **Table 13**, page 42).

5.8.1.2 Pulley with bearings directly on shaft (2)

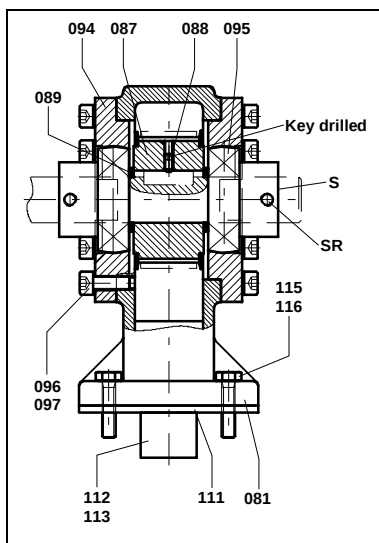

1. Slacken the timing belt: Remove the dust cover (63) of the tensioning station. Loosen the lock-nut (53). Loosen the tensioning screws (51) by approximately 10 turns.
2. When with a dual actuator, first support the coupling if necessary.
3. Unfasten clamping screws S of both adjustment rings of the PME bearings
4. Unfasten adjustment rings SR of both PME bearings (95) by turning in clockwise direction
5. Unfasten retaining screws (96) of flange (94) and carefully take off the flange.
6. Pull shaft and pulley (87) out of drive housing. When with dual actuators, first unfasten threaded pin of coupling.

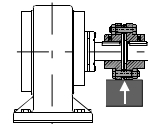


7. Use shim rings (89) to pull off pulley (87). To do this, first unscrew threaded pin (88) .
8. Check shaft key for damage and change if necessary
9. Insert new pulley, drill key and fix with threaded pin
10. For assembly, proceed in reverse order. Ensure that the pulley is again precisely located in the centre of the housing. This is ensured when the shim rings (89) are used.


5.8.1.3 Pulley fitted directly on the gearbox shaft

For more information, see chapter 5.7, page 39.

5.8.2 Replacing the pulley on the tensioning station

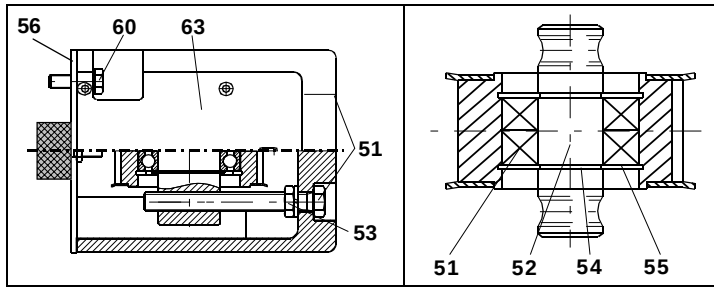

1. Move the carriage almost up to the tensioning station
2. Switch off the actuator at the main switch and ensure that it cannot be switched on again.
3. If needs be, remove the steel strip cover (chapter 5.11)
4. Slackening the timing belt: Remove the dust cover (63) of the tensioning station. Loosen the lock-nut (53). Loosen the tensioning screws (51) by approximately 10 turns.

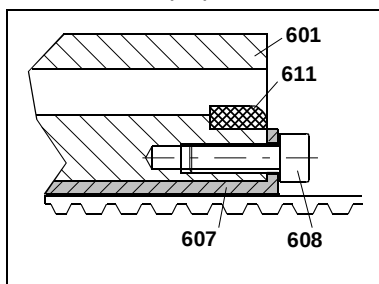

5. Loosen the timing belt clamp: Unscrew screw (608). Completely pull out and remove the bracket. If the bracket is tight and cannot be loosened, then the load attachment plate must be removed
6. Unfasten 4 screws (60) and carefully take off tensioning station with baffle plate (56).
7. Unscrew the tensioning screws (62) out of the pulley socket pins until the complete pulley assembly can be removed.
8. Insert a new pulley assembly and screw the tensioning screws (62) into the bolts a few turns.
9. Place the timing belt around the pulley and attach the tensioning station using screws and new Schnorr lock washers.
10. Attach the timing belt according to chapter 5.2.2 points 7-12.

5.9 Dual actuators

5.9.1 General

Dual actuators are generally supplied as two individual actuators. Depending on the actuator spacing there are one or two Servoflex couplings on the spacer shaft (see chapter 5.9.3 page 43). These couplings compensate for both axial and angular misalignment. The coupling(s) consists of two shells and a spring assembly. This spring assembly accommodates the axial and angular misalignment. With the help of a shrink-fit washer, the two carriages can be aligned exactly to one another.

5.9.2 Aligning the carriages with one another

1. Undo the screws of the shrink-fit washer (see Figures on page 43) in sequence and one at a time until the bush is completely loosened (anti-clockwise).
2. Move the carriages to the defined position (e.g. to the end stop).
3. Tighten the screws of the shrink-fit washer in sequence by a quarter turn each until the stated tightening torque is reached (if possible use a torque wrench) (**Table 13**, page 42).

Actuator type	Tightening torque Ma
HPLA80	5 Nm
HPLA120	12 Nm
HPLA180	12 Nm

Table 13: Tightening torque for shrink-fit washer

5.9.3 Actuator spacing

The following figures showed the different actuator spacing stages applicable for the three unit sizes HPLA80, HPLA120 and HPLA180.

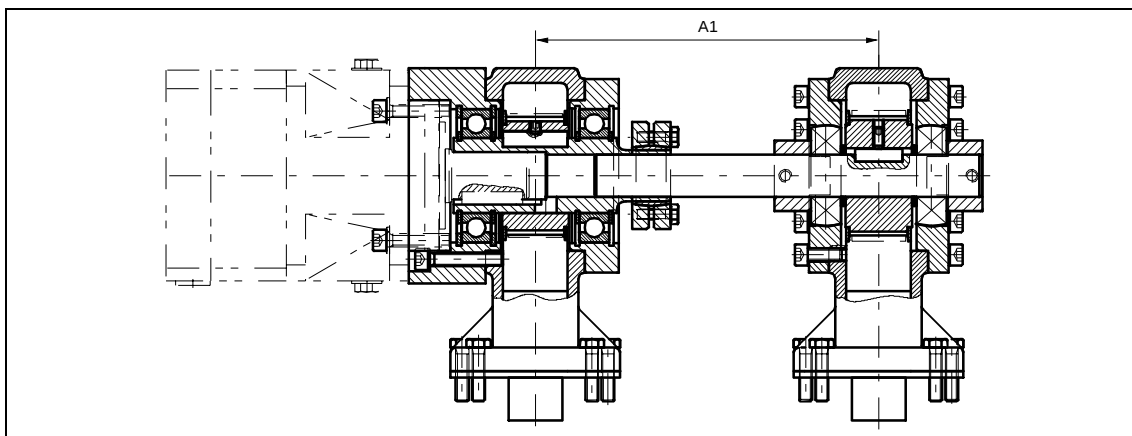


Figure 4: 1st actuator distance stage A1: up to 350mm. Version without coupling.

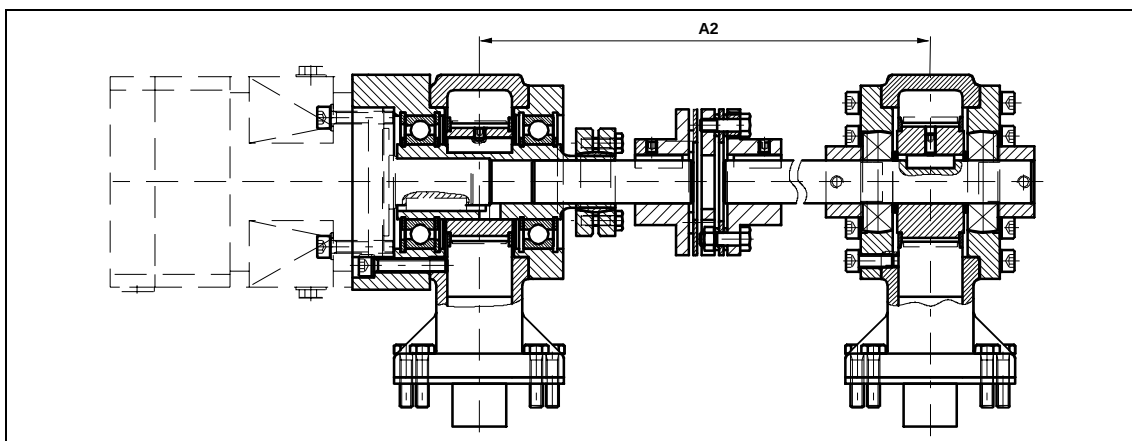


Figure 5: 2nd actuator distance stage A2: 350...600mm. Version with a coupling.

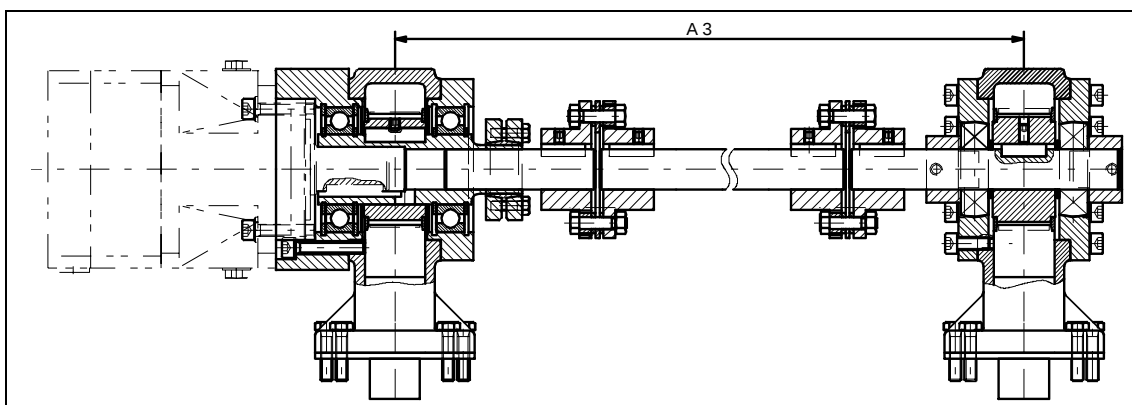


Figure 6: 3rd actuator distance stage A3: >600mm. Version with two couplings.

Actuator distance stage	HPLA80	HPLA120	HPLA180
1st actuator distance	120...350mm	150...350mm	250...350mm
2nd actuator distance	350...600mm		
3rd actuator distance	> 600mm		


Table 14: Overview of the actuator spacing stages

Small actuator stages are possible once discussed with Parker.

5.10 Spliced or jointed actuators

5.10.1 General

 Note	A maximum of one splicing plate is permitted for actuators with steel roller guidance!
---	---

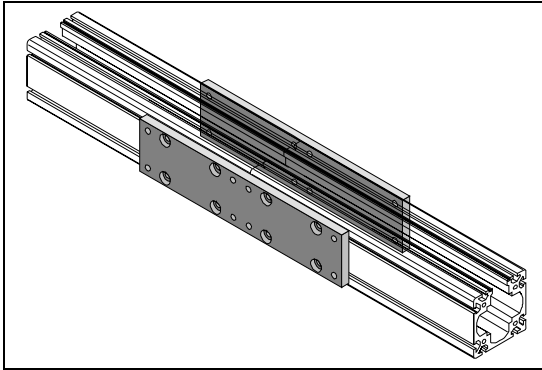


- Splicing plates are used to lengthen the travel or to simplify mounting when access is limited.
- The location of the splicing plates should always be close to a fixing point.
- The bearing distance should generally be between 1.0m and 1.5m.
- It is standard to always separate the profiles in the middle in order to keep the profile elements the same size.

- If a splicing plate is used to lengthen the travel, then the loading data must be reduced (Table 15).

HPLA	Unit	80	120	180
max. perm. load	N	$0,5 \times F_x$	$0,5 \times F_x$	$0,5 \times F_x$
Speed	m/s	< 1	< 1	< 1
Acceleration	m/s^2	< 1	< 1	< 1
Repeatability	mm	$> \pm 0,5$	$> \pm 0,5$	$> \pm 0,5$

Table 15: F_x : LBB080: page 10; LBB120: page 11; LBB180: page 12.

5.10.2 Mounting splicing plates

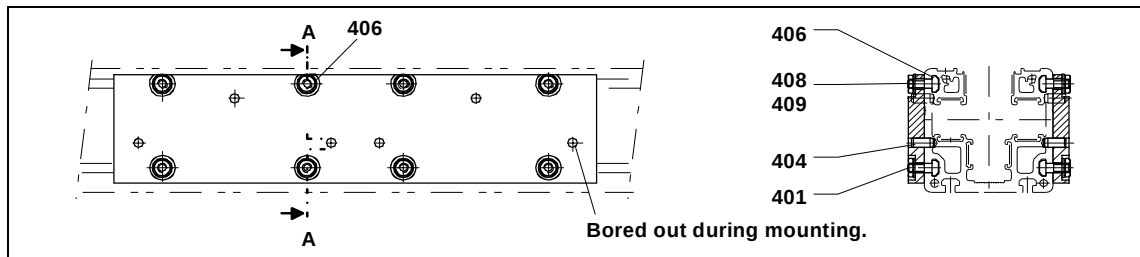

1. Align the profiles with one another.
2. Insert the t-bolts (406) (4 per profile and side).
3. Attach and fix the drilled plate (401), the lock washer (408) and nuts (409).
4. Align the profile exactly, check the running surfaces. Align if necessary. Check for bumps manually - you should not be able to feel any transition.
5. Check whether the pin holes are aligned; if necessary, adjust the position of the HPLA. Insert the pins (404).
6. Tighten the nuts (409) .
7. Mount the timing belt and align it (chapter 5.2).

5.11 Steel strip cover




Note


In all work on the steel strip cover, make sure that the steel strip is not kinked, distorted or damaged in any way. If the steel strip is damaged, it must be changed.

5.11.1 Mounting, dismantling and replacing worn parts

5.11.1.1 Dismantling the steel strip cover

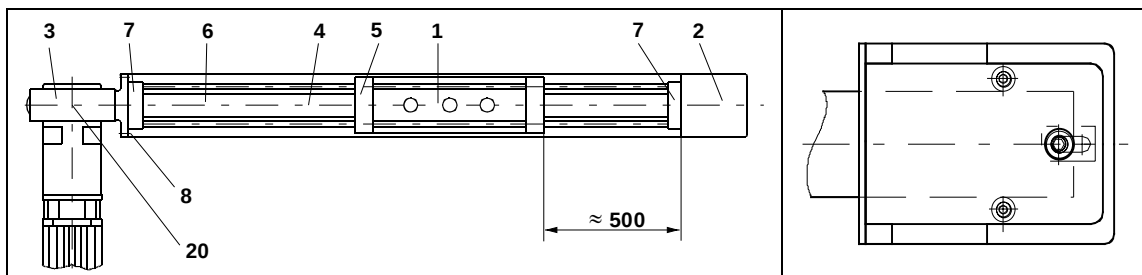


1. Stop the carriage (1) approx. 0.5m in front of the tensioning station (2).
2. Switch off the actuator at the main switch.

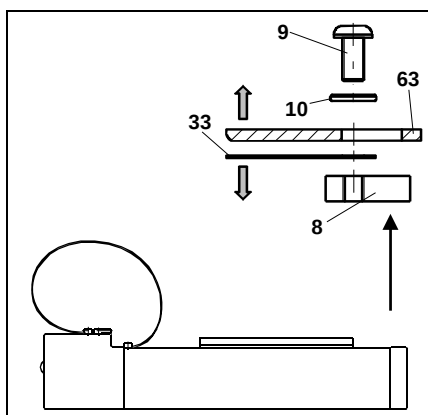

3. Undo the oval head screw which holds the steel strip (screw can now be moved in slotted hole).
4. Remove cover from tensioning station (63) and unscrew steel strip (33) from cover.
5. Dismantle the strip guides (5) on both sides of the load attachment plate. Make sure that the drag bar (felt wiper) and the springs do not fall out.
6. Pull the steel strip carefully through the carriage.
7. Roll up the steel strip carefully in the direction of the drive station and fix using adhesive tape.

5.11.1.2 Mounting the steel strip cover

1. Unroll the steel strip and feed the end through the carriage. Slide the steel strip over the whole length of the stroke by pulling gently on it.
2. The strip guides (5) on both sides of the load attachment plate must be joined securely at the sides and top. Make sure that the springs and felt wiper are still in the housing.

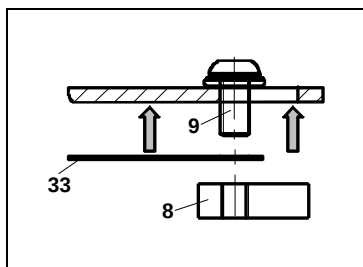

3. Fit steel strip on cover of tensioning station using oval head screw (9), lock washer and the t-nut (8) (do not tighten screw).
4. Screw on cover (with steel strip) of tensioning station and tighten. With the HPLA80, unfasten clamping plate if necessary and align steel strip (see chapter 5.11.2 page 47)
5. Tighten screw which fixes the steel strip (9).




Note

Do not strain the steel strip!

6. Switch on the actuator drive.


7. Move the carriage for approximately 10 strokes over the whole length at a low speed ($v < 2 \text{ m/s}$). Watch the steel strip to see whether a "wave" forms in front of the respective turning station in the direction of movement.
8. Then stop the carriage coming from the drive station (20) at 0.5m before the tensioning station (2).
9. Unfasten steel strip fixing screw (9) in cover of tensioning station.
10. Smooth out the "wave", but do not strain the strip in doing so.
11. Tighten the screw.

5.11.1.3 Replacing the steel strip

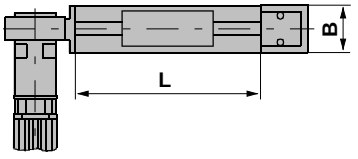 Note	New steel strips must only be obtained from Parker. To order one, we will need to know the length L of the profile. Using these details, the steel strip will be shortened and pierced with two fastening holes.	
---	--	---


1. Dismantle the steel strip (see chapter 5.11.1.1).
2. Remove clamping piece from drive station. With the HPLA180 and HPLA120, pull steel strip off grooved drive stud. With the HPLA80, simply unfasten clamping plate (see Figure on page 48).
3. With a HPLA180 or HPLA120, connect new steel strip with grooved drive stud.
4. Secure clamping piece, and/or with the HPLA80 fix steel strip with clamping plate.
5. Mount the steel strip (chapter 5.11.1.2).

5.11.1.4 Replacing the drag bar (felt wiper)

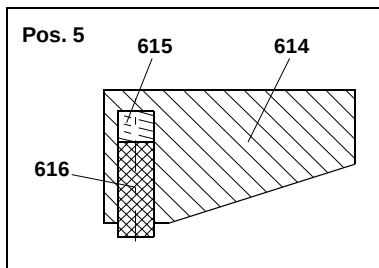

1. Switch off the actuator at the main switch.
2. Dismantle the strip guides (5) on both sides of the load attachment plate.
3. Replace the felt wiper (617) with a new one. Make sure that the springs (616) do not fall out.
4. The strip guides (5) on both sides of the load attachment plate must be joined securely at the sides and the top.
5. Switch on the actuator drive.

5.11.1.5 Replacing the baffle or running bar

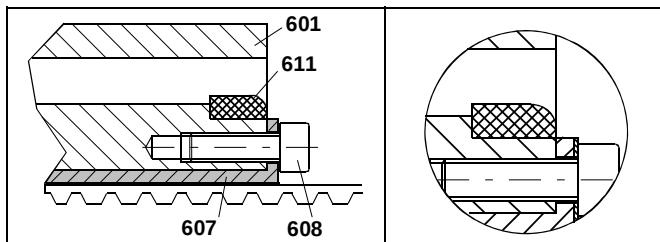

1. Dismantle the steel strip (see chapter 5.11.1.1)
2. Push out the old baffles (611) to the side.
3. Push new baffles in the load attachment plate (601) so that the steel strip runs over the radius of the baffle. Align the baffle in the centre.
4. Mount the steel strip (see chapter 5.11.1.2)

5.11.2 Retrofitting the steel strip cover


**Note**

To retrofit the steel strip cover, you will require:

A prepared load attachment plate (groove for the baffle, tapped holes for attaching the strip guides), add-on pieces, magnetic strip, steel strip, buffer extensions.

Note:

- The height of the construction and the fixing points will remain unchanged.
 - The effective stroke will be reduced by 70mm in the HPLA80, by 90mm in the HPLA120 and by 200mm in the HPLA180 (also see dimensions sheets, page 14)
- In order to retrofit, you will need to completely dismantle the HPLA.

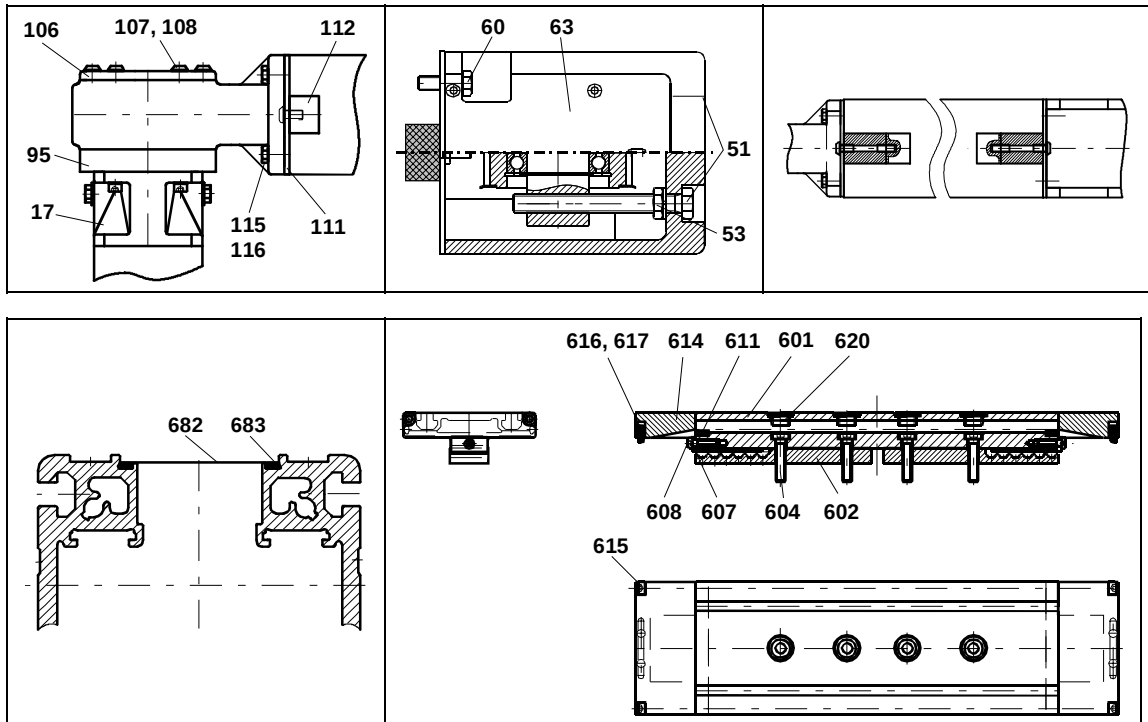

1. Switch off the actuator at the main switch and ensure that it cannot be switched on again.
2. Slacken the timing belt:
Remove the dust cover (63) of the tensioning station.
Loosen the lock-nut (53).
Loosen the tensioning screws (51) by approximately 10 turns anti-clockwise.
3. Loosen the timing belt:
Remove the protective caps (620), loosen the screws (604) and remove the load attachment plate (601). Take timing belt out of toothed strip (602) and remove toothed strip.
4. Clean the grooves for the magnetic strip (683) and spray with Delo-Quick 5002 activator.
Apply Loctite 326 Adhesive to the grooves, insert the magnetic strips and press down.
5. Place the prepared load attachment plate and toothed strip (602) on the carriage, insert the screws (604), align the load attachment plate centrally and tighten the screws.

**Caution**


Secure the carriage with the load attachment plate against moving or falling out by using adhesive tape.

6. 4 Loosen the 4 screws of the tensioning station (60), remove them carefully and remove the timing belt.
7. Clamp the metal base of the rubber buffer (112) in a vice according to the above and carefully remove the screw holding it to the baffle plate.


**Note**

On dismantling the rubber buffer, only grip its metal base plate. For safety reasons, the fastening screw of the buffer is secured with Loctite.

8. Mount the buffer extension:
Apply Loctite to the set screw (14) and screw half its length into the spacer (13).
Clean the thread of the rubber buffer, apply Loctite and screw the buffer onto the exposed half of the setscrew.
Apply Loctite to the thread of the screw (113) and screw the spacer and rubber buffer on to the battle plate (111) of the tensioning station.
Using pliers, grip the spacer and tighten up the screw securely. Make sure that the face of the spacer lies firmly against the housing of the tensioning station.
9. Place the timing belt around the pulley and fasten the tensioning station using screws (60) and new Schnorr lock washers.
10. Loosen the screws (4x) of the drive station (115), remove them carefully and remove the timing belt.
11. Remove the rubber buffer using a similar procedure to that with the tensioning station, lengthen it and re-attach.
12. Place the timing belt around the pulley of the drive station and fasten this using screws (115) and new Schnorr lock washers (116).

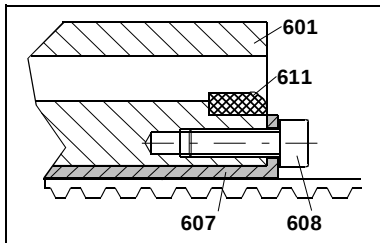

13. Unscrew the timing belt retaining bracket (607) from the dismantled load attachment plate.
14. Push the timing belt between the toothed strip and the load attachment plate. Secure timing belt clamping plate (607) with screw (608) (for screw fastening, also see page 27).
15. Tension the timing belt (chapter 5.2.3)
16. Align the timing belt (chapter 5.3)
17. Set up the reference point (chapter 5.4.6)
18. Push baffles (611) into the load attachment plate (601) so that the steel strip runs over the radius of the baffle. Align the baffle in the centre.
19. Clean the magnetic strip to remove any swarf or dirt.
20. Unroll the steel strip carefully, push it through the opening in the load attachment plate and lay it out over the whole HPLA profile.
21. Fasten steel strip onto drive station end. The steel strip on the HPLA80 is fixed differently from that on the HPLA180 and HPLA120:
 - HPLA180/HPLA120: Connect the clamping piece (643) carefully to the steel strip (6) using the grooved drive stud (651). Use with screws (645), washers (646) and shim (647) to fasten clamping piece on drive housing.
 - HPLA80: Use clamping plate, oval-head screw and retaining ring to clamp steel strip to drive housing.

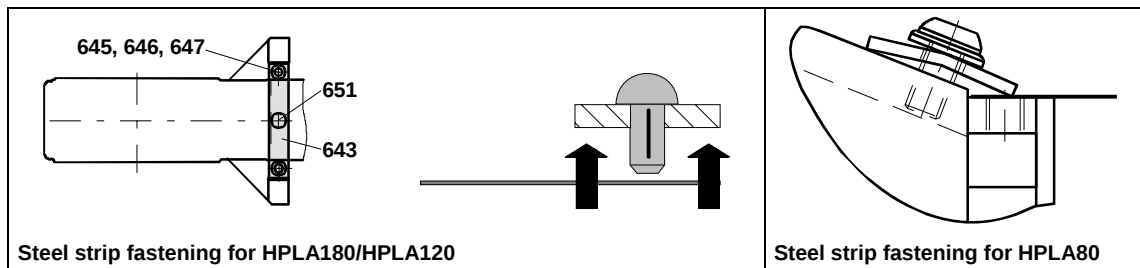

22. Place two springs (617) and one felt wiper (616) in each of the strip guides (614).
23. Mount the steel strip cover according to chapter 5.11.1.2.

Wearing parts and replacement parts

6 Wearing parts and replacement parts

6.1 Wearing parts

6.1.1 Wearing parts HPLA80

Pos.	Name	Location	Order no.
16	Wheel R4OL0024	Carriage for plastic roller guidance	416-201070
32	Timing belt 25AT10 HPF	Belt drive	420-000016

Table 16: Wearing parts for the HPLA80-standard-version

Pos.	Name	Location	Order no.
33	Steel strip 38mm x 0.152mm	Steel strip cover option	400-300708
617	Spare parts package for steel strip reversing unit. (4 felts, 4 baffles, 8 compression springs)	Steel strip cover option	510-006401

Table 17: HPLA wearing parts steel strip cover HPLA80

Pos.	Name	Location	Order no.
36	Steel strip 15mm x 1.5mm	Steel guidance	125-071742
16	Wheel NPPU	Carriage, steel guidance	416-200105
3	Felt, lubricating cassette	Steel guidance	180-600077

Table 18: Wearing parts for steel guidance HPLA80

Pos.	Name	Location	Order no.
44	Pulley package, tensioning station	With bearing + bolt D=15	510-900220
87	Pulley for hollow shaft bearing	Z4AS5053 D=35H7	450-100763
87	Directly on shaft (for dual actuator)	Z4AS0057 D=20H7	420-100762
87	Pulley directly mounted on gearbox shaft, gearbox P3	Z4AS0053 D=16H7	420-100760
87	Pulley directly mounted on gearbox shaft, gearbox P4	Z4AS0054 D=22H7	420-100761

Table 19: Wearing parts: pulleys for HPLA80

6.1.2 Wearing parts HPLA120

Pos.	Name	Location	Order no.
16	Wheel R4OL0103	Carriage, plastic roller guidance	416-201084
32	Timing belt 32AT10 HPF	Belt drive	420-000031

Table 20: Wearing parts for HPLA120-standard-version

Pos.	Name	Location	Order no.
33	Steel strip 45mm x 0.152mm	Steel strip cover option	400-300709
617	Spare parts package for steel strip reversing unit. (4 felts, 4 baffles, 8 compression springs)	Steel strip cover option	510-007401

Table 21: HPLA wearing parts steel strip cover HPLA120

Wearing parts and replacement parts

Pos.	Name	Location	Order no.
36	Steel strip 20mm x 2mm	Steel guidance	125-071628
15	Wheel NPPU	Carriage, steel guidance	416-200104
3	Felt, lubricating cassette	Steel guidance	180-600075

Table 22: Wearing parts for steel guidance HPLA120

Pos.	Name	Location	Order no.
44	Pulley package, tensioning station	With bearing + bolt D=30	510-900221
87	Pulley for hollow shaft bearing	Z4AS5045 D=50H7	420-100770
87	Directly on shaft (for dual actuators)	Z4AS5049 D=30H7	420-100772
87	Pulley directly mounted on gearbox shaft, gearbox P4	Z4AS5051 D=22H7	420-100774
87	Pulley directly mounted on gearbox shaft, gearbox P5	Z4AS5050 D=32H7	420-100773

Table 23: Wearing parts: Pulleys for HPLA120

6.1.3 Wearing parts HPLA180

Pos.	Name	Location	Order no.
16	Wheel R4OL0099	Carriage, plastic roller guidance	416-201080
32	Timing belt 56AT20 PAZ	Belt drive	420-000051

Table 24: Wearing parts for HPLA180-standard-version

Pos.	Name	Location	Order no.
33	Steel strip 76mm x 0.152mm	Steel strip cover opt.	400-300706
617	Spare parts package for steel strip reversing unit. (4 felts, 4 baffles, 8 compression springs)	Steel strip cover opt.	510-008401

Table 25: HPLA wearing parts steel strip cover HPLA180

Pos.	Name	Location	Order no.
36	Steel strip 30mm x 3mm	Steel guidance	125-071545
15	Wheels NPPU	Carriage, steel guidance	416-200100
3	Felt, lubricating cassette	Steel guidance	180-300065

Table 26: Wearing parts for steel guidance HPLA180

Pos.	Name	Location	Order no.
44	Pulley package, tensioning station	With bearings + bolts D=55	510-900222
87	Pulley for hollow shaft bearing	Z4AS5030 D=60H7	420-100780
87	Directly on shaft (for dual actuators)	Z4AS5048 D=40H7	420-100781
87	Pulley directly mounted on gearbox shaft, gearbox P5	Z4AS5052 D=32H7	420-100782

Table 27: Wearing parts: pulleys for HPLA180

Wearing parts and replacement parts

6.2 Replacement parts

6.2.1 Replacement parts HPLA80

Pos.	Name	Location	Order no.
18	Eccentric bush E4XZ0004	Carriage	125-068100
19	Cylindrical bush B4UC0140	Carriage	125-071705
21	Grooved stone T4NU0075	Carriage	131-700165
22	Washer S4EI0008	Carriage	125-068150
23	Schnorr lock washer M5	Carriage	135-201051
24	Cylindrical screw DIN6912 M5x20	Carriage	130-302680
112	Rubber buffer	Drive and tensioning station	400-302100

Table 28: Replacement parts HPLA80-standard-version

Pos.	Name	Location	Order no.
614	Cover flap P4LA2770	Timing belt cover	125-071707
615	Cylindrical screw DIN912 M5x50	Timing belt cover	130-302327

Table 29: Replacement parts for steel strip cover HPLA80

Pos.	Name	Location	Order no.
37	Round cord	Steel guidance	125-071743
--	Lubricating cassette assembly	Steel guidance	on request

Table 30: Replacement parts for steel guidance HPLA80

6.2.2 Replacement parts HPLA120

Pos.	Name	Location	Order no.
18	Eccentric bush E4XZ0003	Carriage	125-070100
19	Cylindrical bush B4UC0135	Carriage	125-071600
21	Grooved stone T4NU0064	Carriage	131-700143
22	Washer S4EI0145	Carriage	125-071601
23	Schnorr lock washer M8	Carriage	135-201053
24	Cylindrical screw DIN6912 M8x25	Carriage	130-302745
112	Rubber buffer	Drive and tensioning station	400-302102

Table 31: Replacement parts for HPLA120-standard version

Pos.	Name	Location	Order no.
614	Cover flap P4LA2919	Timing belt cover	125-071635
615	Cylindrical screw DIN912 M6x55	Timing belt cover	130-302352

Table 32: Replacement parts for steel strip cover HPLA120

Pos.	Name	Location	Order no.
37	Round cord	Steel guidance	125-071642
--	Lubricating cassette assembly	Steel guidance	on request

Table 33: Replacement parts for steel guidance HPLA120

Wearing parts and replacement parts

6.2.3 Replacement parts HPLA180

Pos.	Name	Location	Order no.
18	Eccentric bush E4XZ0007 for plastic wheels	Carriage	125-071500
	Eccentric bush E4XZ0012 for steel wheels		125-071533
19	Cylindrical bush B4UC0131 for plastic wheels	Carriage	125-071501
	Cylindrical bush B4UC0136 for steel wheels		125-071532
21	Grooved stone T4NU0054 12(M10)x130	Carriage	131-700124
22	Washer S4EI0134	Carriage	125-071502
23	Fan washer DIN6798 d10.5(d19)	Carriage	135-200620
24	Countersunk screw DIN7991 M10x45	Carriage	130-106570
112	Rubber buffer	Drive and tensioning station	400-302002

Table 34: Replacement parts for HPLA180-standard-version

Pos.	Name	Location	Order no.
614	Cover flap P4LA 2920	Timing belt cover	125-071512
615	Cylindrical screw DIN912 M8x110	Timing belt cover	on request

Table 35: Replacement parts for steel strip cover HPLA180

Pos.	Name	Location	Order no.
37	Round cord	Steel guidance	125-071642
--	Lubricating cassette assembly	Steel guidance	on request

Table 36: Replacement parts for steel guidance HPLA180

Linear actuator HPI A

53

Index

8 Index

- Abnormal timing belt wear
 - breaking of the timing belt 25
 - softening of the material..... 25
 - toes 25
 - tooth flank..... 25
 - tooth profiles..... 25
- Adjusting the machine zero point 35
- Adjusting the reference point..... 35
- Assembly..... 26
- Attaching a motor 35
- Belt tension 25
- Breaking of the timing belt..... 25
- Carriage
 - characteristics of correct adjustment..... 32
 - installation 34
 - removal 32
- Carriage play
 - adjusting..... 31
 - checking 32
- Changing or attaching the motor 35
- Changing the gearbox
 - further gearbox designs..... 36
 - pulley mounted on gearbox shaft 38
- Construction of the HPLA..... 8
- Dangers, identification..... 5
- Dimensions 13
- Dismantling the steel strip cover 44
- Dual actuator..... 41
 - actuator distances 42
 - aligning the carriages 41
 - installing 20
- Eccentric wheel
 - adjusting 34
 - zero position 34
- Index 53
- Initiators..... 21
 - General 21
 - setting up machine zero point 23
 - setting up the end limits..... 22
 - wiring..... 21
- Installing the HPLA
 - Dual actuator 20
 - single actuator 20
- Load bearing capacity of carriage and timing belt..... 10
- Maintenance
 - maintenance schedule.....24
 - replacement interval for steel strip cover wearing parts...24
 - timing belt tension.....24
 - timing belt wear.....25
- Mounting
 - safety notices.....26
 - Steel strip cover44
- Operating tension28
- Order code.....52
- Overlong actuators
 - loading data43
 - mounting splice plates43
- Product description8
- Proper use5
- Pulley
 - changing39
 - replace directly on shaft.....40
 - replacing tensioning station ..41
 - replacing when on a hollow shaft.....40
 - replacing where Pulley is mounted directly on the gearbox shaft.....40
- Repair26
- Replacement parts.....50
- Replacing the pulley on the drive station39
- Residual dangers, identification..5
- Retrofit the steel strip cover46
- Safety5
 - General dangers5
 - particular dangers.....7
 - proper use5
 - residual dangers, identification5
 - safety notices used5
- Safety distance21
- Safety notices
 - mounting26
 - operating personnel6
 - user company6
- Safety-conscious working
 - following the advice6
 - operating personnel6
- Screw retention.....26
- Service number.....26
- Setting up the end limits22
- Softening of the timing belt25
- Start-up.....19
 - substructure preparation.....19
- Steel strip cover.....44
 - dismantling44
- Mounting 44
 - replacing the baffle45
 - replacing the drag bar45
 - Replacing the steel strip..... 45
- Substructure preparation..... 19
- Tears in the belt teeth 25
- Technical data..... 8
- Technical data..... 9
- Tightening torque for shrink-fit washers..... 41
- Timing belt
 - aligning..... 30
 - changing..... 26
 - checking the timing belt run.. 30
 - general 26
 - slackening 27
 - slackening 46
 - tensioning 28
- Timing belt cover..... 44
- Timing belt run
 - checking 30
- Timing belt tension 28
 - adjusted by the factory 29
 - checking and adjusting..... 30
 - dual actuators 28
 - measuring 30
 - measuring device 30
 - operating tension..... 28
 - Standard value 28
 - tension to be set..... 28
- Timing belt wear..... 25
- Transport..... 7
- usable stroke..... 21
- Wear of the timing belt
 - breaking of the timing belt 25
 - softening of the material..... 25
 - toes 25
 - tooth flank..... 25
 - tooth profiles..... 25
- Wearing parts..... 48
- Wheels
 - changing and adjusting 31
 - changing and adjusting rigid wheel..... 33
 - changing and adjusting the eccentric wheel 34
 - changing individual..... 33
 - checking the pressure acting against them..... 34
 - tightening torque of the wheel fastening elements 34

PLEASE NOTE THIS IS FOR MAINTENANCE REFERENCE ONLY.
PART#'S NOMENCLATURE IS HAUSER GERMANY OFFERING.
PLEASE REFER TO WWW.PARKERMOTION.COM FOR USA
PART# NOMENCLATURE

APPENDIX A

Diagram represents the relationship between timing belt tension and tightening torque. Curve shown applies for new, clean, non lubricated screws and threads.

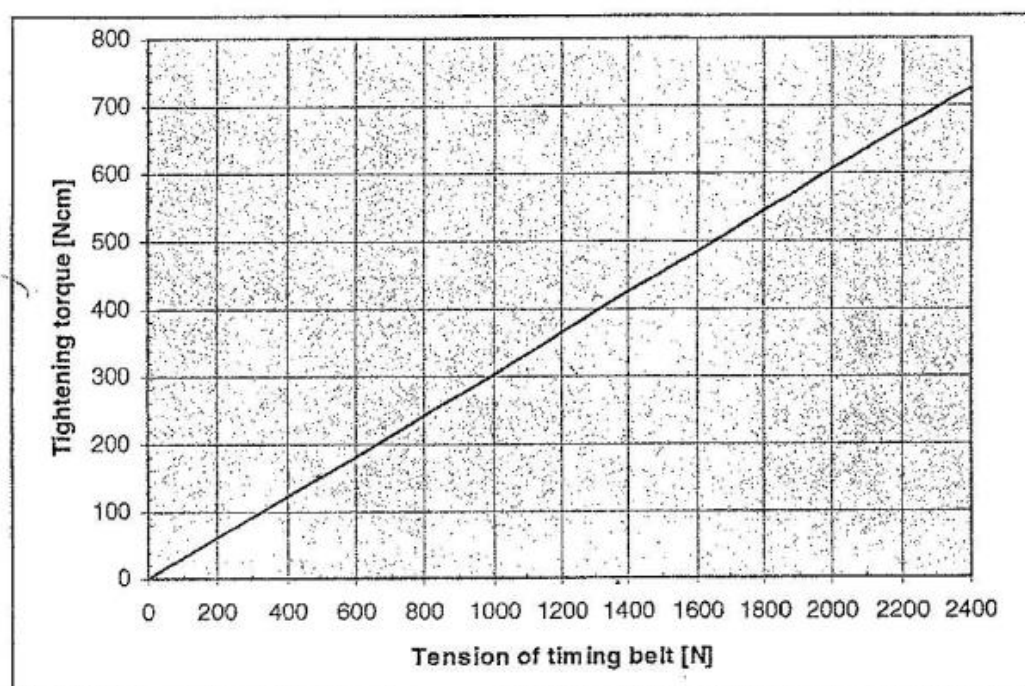


Diagram 2: Torque readings and resultant timing belt tension.